POSI-Lite

Base Fix

INSTALLATION GUIDE

Safety

Gloves for handling glass
Eye protection goggles
Ear protection

Tools

Drill & suitable drill bits
Spirit level
Tape measure
Hole blower (concrete fixings)
Soft Mallet
Socket set 1/2inch
Torque wrench 1/2
Blocks to support glass
Quick grip
POSI Spanner
Glass cleaner and rag

Should any problems arise or you have any questions please don't hesitate to contact us:

T: +44 (0)1208 261 040
E:- sales@pure-vista.com
www.pure-vista.com

POSI-Lite Base Fix

INSTALLATION GUIDE

1.

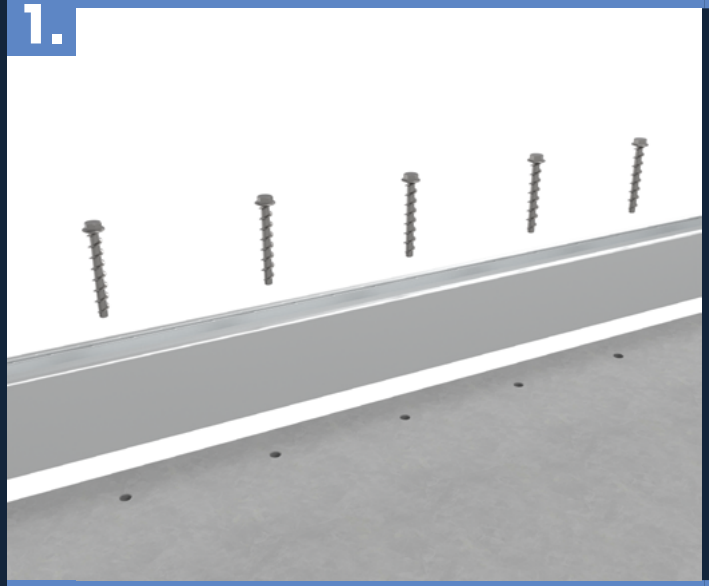

FIT THE CHANNEL

The POSI-Lite base channel should be placed onto its designated position and the holes marked onto the substrate for drilling. Once the shoe is lined up with the holes and is level, the fixings should be tightened up to make the channel rigid. The fixings must be tightened in accordance with the bolt manufacturer's instructions. M12 bolts/fixings must be used. The dowels should be used to align the channels and an inhibitor or clear sealant (Neutral Cure/low-modulus silicone) rubbed on the raw aluminium when the channels are butted together. This should be wiped clear on the channel surface.

Ensure the channel is clean inside before fitting the glass. If cutting the channel make sure all metal filings (swarf) are removed. *

2.

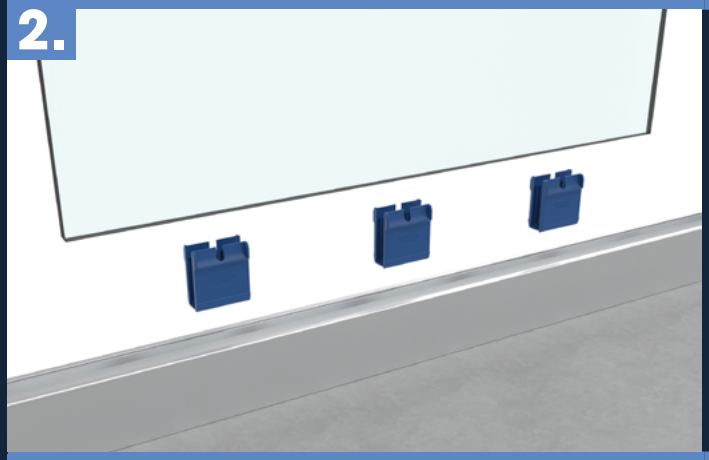

CLAMP THE GLASS

Make the clamps by slotting the left and right sides together. Attach the clamps evenly along the bottom edge of the glass, using the glass clamp placement chart at the end of the guide for reference. Squeeze the clamps tight around the glass and position the panel into the balustrade channel. You must ensure at least 2 clamps are used per glass panel. The glass can now be lowered into the channel.

3.

FIT THE BOLTS

Once the glass is in position, loosly screw the bolts into the clamp bars. The screw needs to go into the flat side, the curved side will fit into the clamp. Slide the aluminium bars curved side down into the recess at the top of each clamp, on both sides of the glass. Loosely screw the bolts into the bars.

* When fitting to metalwork a barrier between different metal types must be used. Additional waterproofing may be required. We strongly advise measuring and ordering the glass after installation of the channel. Gaps between the glass should be no less than 5mm.
In extreme temperature changes the profiles may expand and contract.
Small gaps may need to be left between profiles.

4.

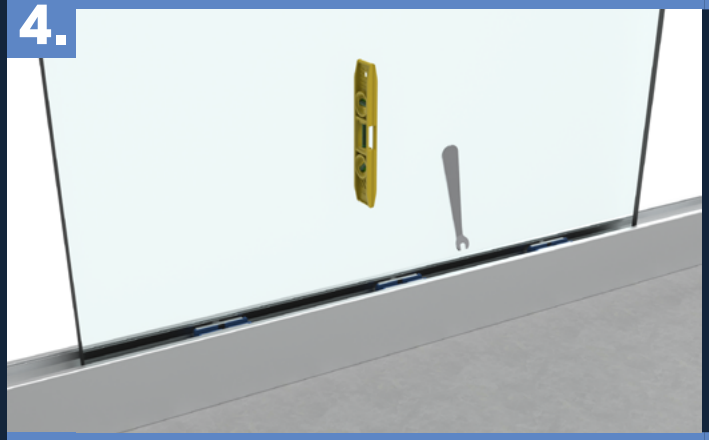

ADJUST THE GLASS

With the bolts loosely in place, the glass panel will be able to move a few milimetres in each direction. Align the panel as required by tightening the bolts using the angled spanner. Both sides need to be tightened to make sure the glass is fixed into place. Give the bolts an additional half turn from their tight position to ensure that the glass is securely held in place. A torque of 8Nm should be applied. An adhesive, such as Loctite, should be used on the threads once the glass is set.

5.

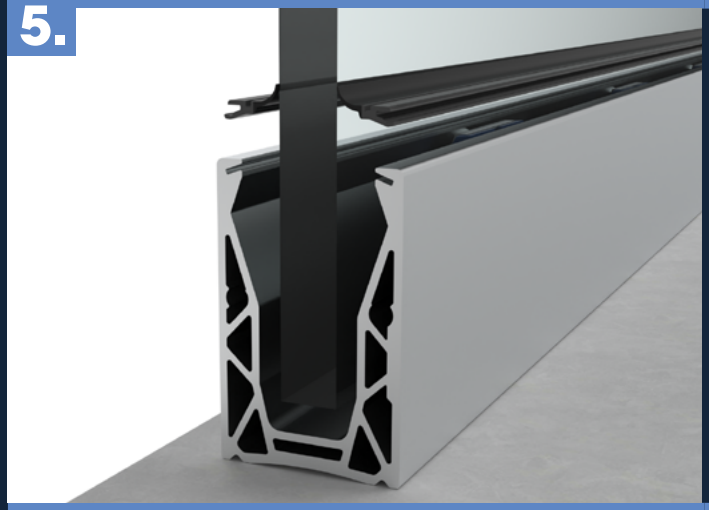

ADD THE GASKET

The gasket simply hooks and pushes into the recess at the top of the channel for a tidy finish. Use a soft mallet to push this in if required.

If you're using an end-cap you can position this now. There are 2 versions of end caps. A Knock-in and flat plate. Both require adhering to the channel end. To keep water from submerging the glass we suggest drilling the thin end caps below the glass line with a min. 8mm hole or we can supply slotted versions. Other draining methods may need to be considered depending on the size of the balustrade and design.

6.

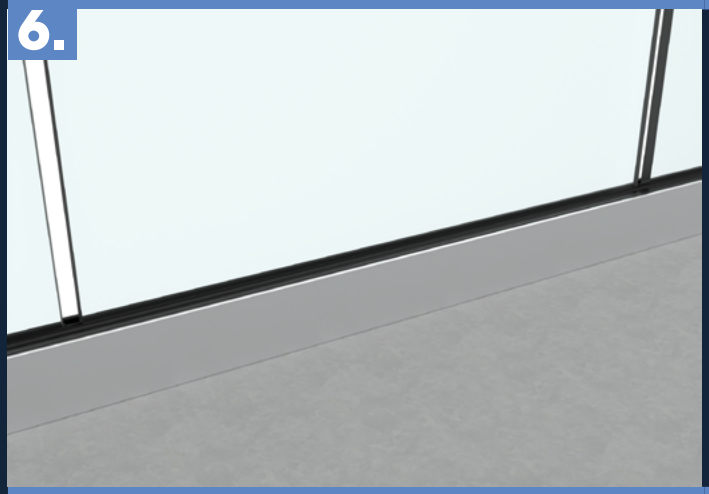

FINISH INSTALLATION

Once everything is correctly in place, the glass and channel will need to be cleaned. Using a non-abrasive glass cleaner for the glass and warm soapy water for the channel. We reccomend using a soft cloth to avoid scratches. Refer to the operating and maintenance manual for further maintenance.

Should any problems arise or you have any questions please don't hesitate to contact us:
T: +44 (0)1208 261 040
E:- sales@pure-vista.com
www.pure-vista.com

POSI-Lite

GLASS CLAMP GUIDE

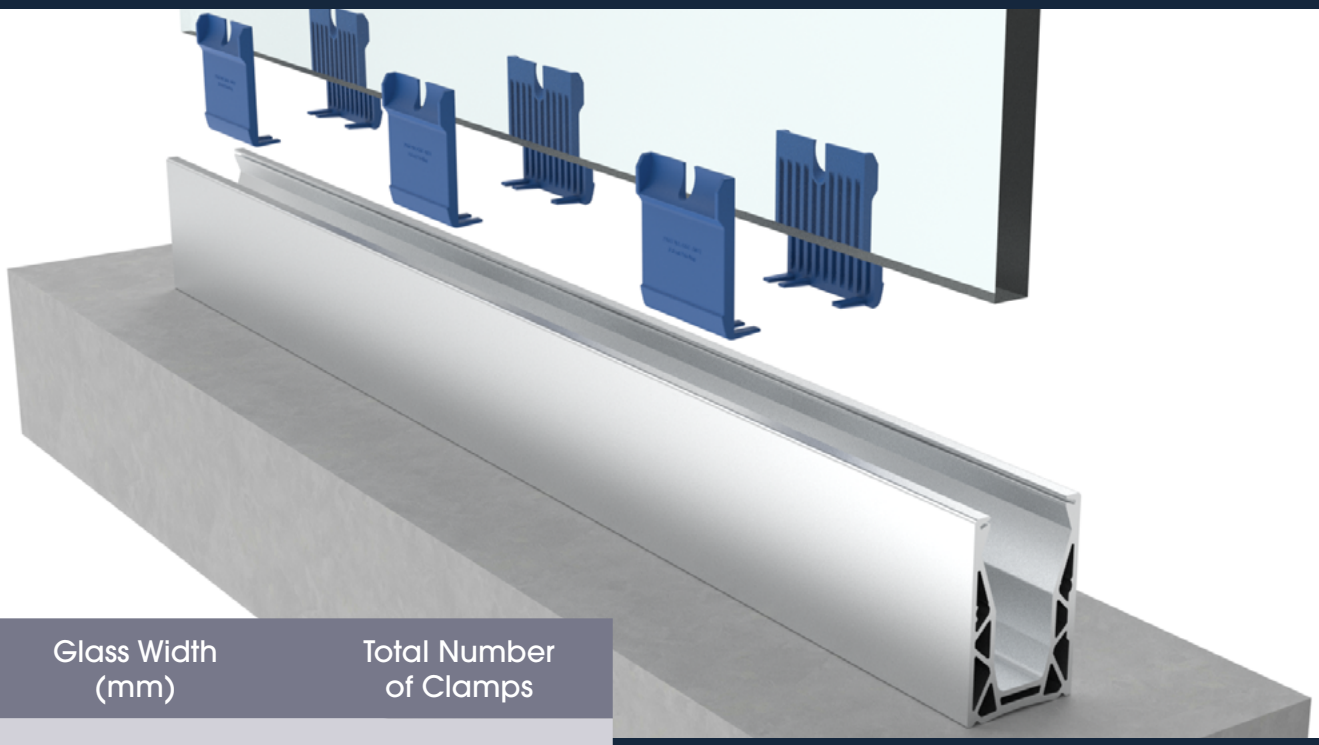

Glass Width (mm)	Total Number of Clamps
400 - 799	2
800 -1149	3
1150 - 1499	4
1500 - 1849	5
1850 - 2199	6

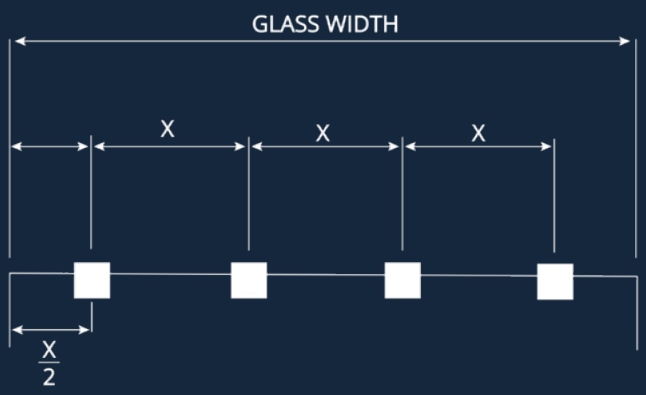

Glass width divided by number of clamps = X
X divided by 2 = First centre of clamp position from the edge of the glass.

Glass Width (mm)	Number of Clamps	Glass Edge to Centre of Clamp (mm)	Clamp Spacing (mm)
1000	3	166.5	333
1250	4	156.25	312.5
1300	4	162.5	325
1400	4	175	350
1500	5	150	300