


Fitting Instructions


1. Fixing the Base Rail

The MegaGrip base rail should be placed onto its designated position and the holes marked on the substrate for drilling. Once the shoe is level insert the fixings and tightened up to make the channel rigid. The fixings must be tightened in accordance with the manufacturer's instructions. M12 countersunk bolts must be used.

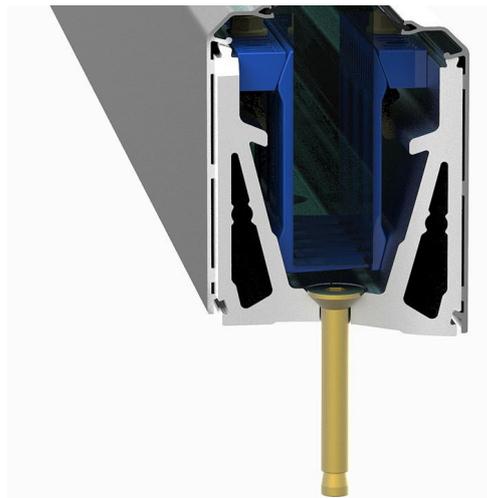


2. Glass slip clamp fitting

The glass slip clamps need to be placed onto the bottom of the glass. This requires lifting the glass off the floor sufficiently onto some plinths. Loosely attached the clamp halves to each other, they are designed so the fingers slide into each other. Slide these onto the bottom of the glass. The clamps require even spacing using four per metre. On a metre wide panel the clamps need to be positioned so the centre of the clamps are 125mm from the edge of the glass and then at 250mm centres. The glass can now be lowered into the channel.

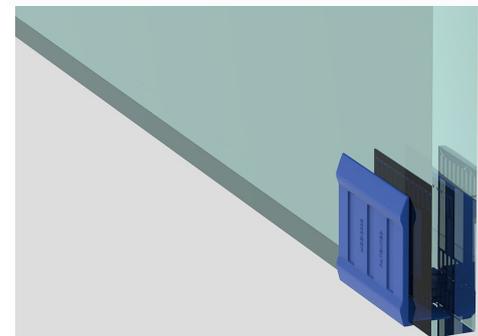


3. Preparing the Mega-Hook

The clamp bar needs to be slid over the threaded end of the Mega-Hook and the nut loosely tightened so the bar can easily spin into the correct position.

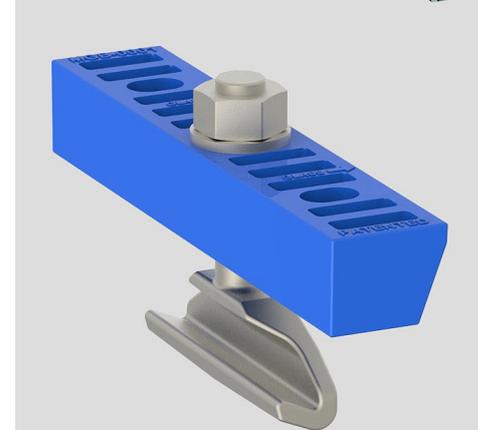


4. Glass Clamp Bar Fitting

The Mega-Hooks and clamp bars can now be placed into the top of each glass slip clamp. Lower the hook next to the glass slip clamp, use the hook to catch the metal lip of the base channel. The angled side of the plastic clamp bar must face the angled glass slip clamp/glass as shown.

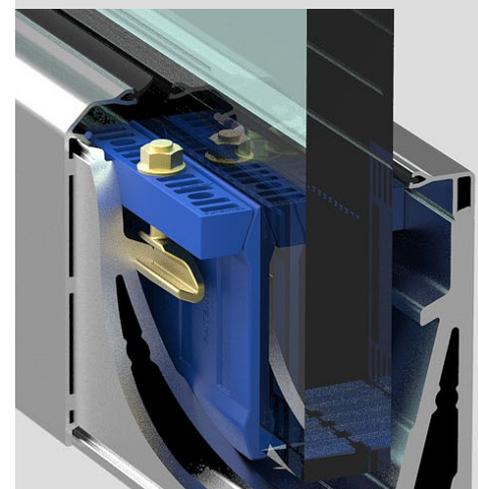


5. Getting the glass level

Place a spirit level on the glass, manoeuvre the glass whilst the bolts are loose until it is in the correct position. Now the bolts can be tightened, loosely each side by hand before using a ratchet/torque bar. The bolts must be tightened to 15Nm.

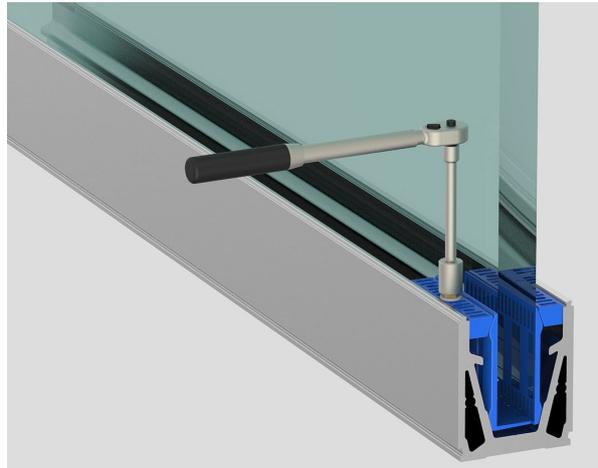

6. Top Seal Strip/Cladding

The gasket requires feeding into the rebate of the side cladding and/or top bead. Do not stretch the gasket. Once the gasket is flush with each end of the strip it needs to be cut. The profile now needs to be clipped onto the top of the channel. This can be done by pressing firmly down on the profile, working from one end to the other. A soft mallet may be required. The side cladding must use securing tape or an adhesive to secure it against the channel.

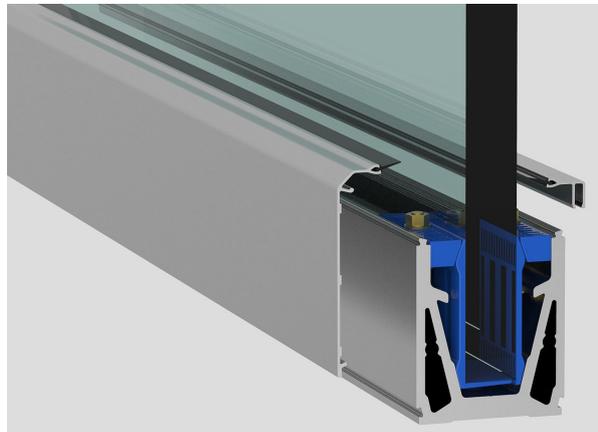

7. Cleaning

Once everything is correctly in place and the job is complete, the glass and channel need to be cleaned. Use a non-abrasive glass cleaner on the glass and warm soapy water on the MegaGrip channel. We also recommend using a soft sponge or cloth to avoid damaging the channel or glass.

We have tried to make the system as simple and easy to install as possible, however should you not feel confident enough to fit this please contact a reputable glazier or builder.

Should any problems arise please don't hesitate to contact us through the following ways:-

T:- 01208 261 040
F:- 01208 261 041
E:- Sales@Purevista.co.uk

www.pure-vista.com