

# Origin-R Wedge Installation

## Wedge Kit Parts List :-



Glass Packing Isolator




High impact plastic isolating wedge




Aluminium wedge

**Note :-** Aluminium shoe channel must be perfectly plumb and vertical in order for the glass to be upright. Shimming maybe required during channel installation.

All Health and safety precautions must be followed before any work commences

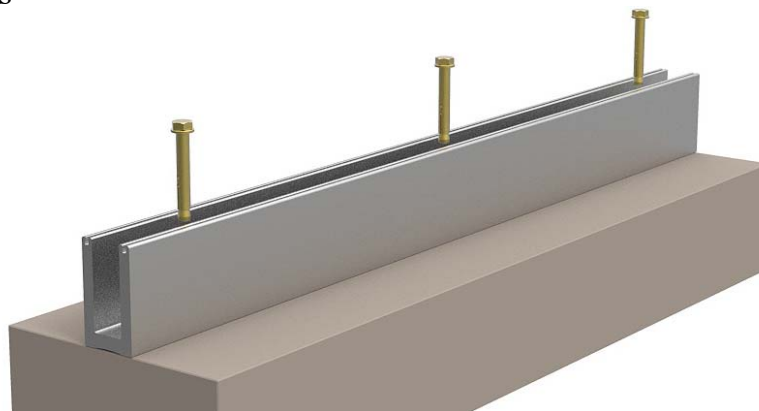

On completion of fitting the aluminium shoe place the glass packing isolators into the shoe channel 125mm from each end and then at 250mm centre to centre, with the small nib on the side the wedges are to be driven in. Place the glass into the central position of the glass packer isolator.

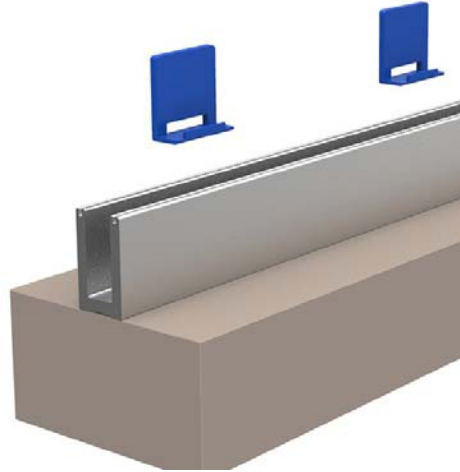

Now place the plastic isolating wedges between the glass and channel (thin end to the top) on top of the nib side of the isolator.

Now place the aluminium wedge between the isolator wedge and the alloy shoe. Before driving the wedge in please check everything is correctly in place and make sure you are happy to proceed. Once all is in place drive the wedge in with a lump hammer and bolster.

