



R-Lock Base Mount
90° Internal Corner Section

DO NOT SCALE
Units - Millimetres

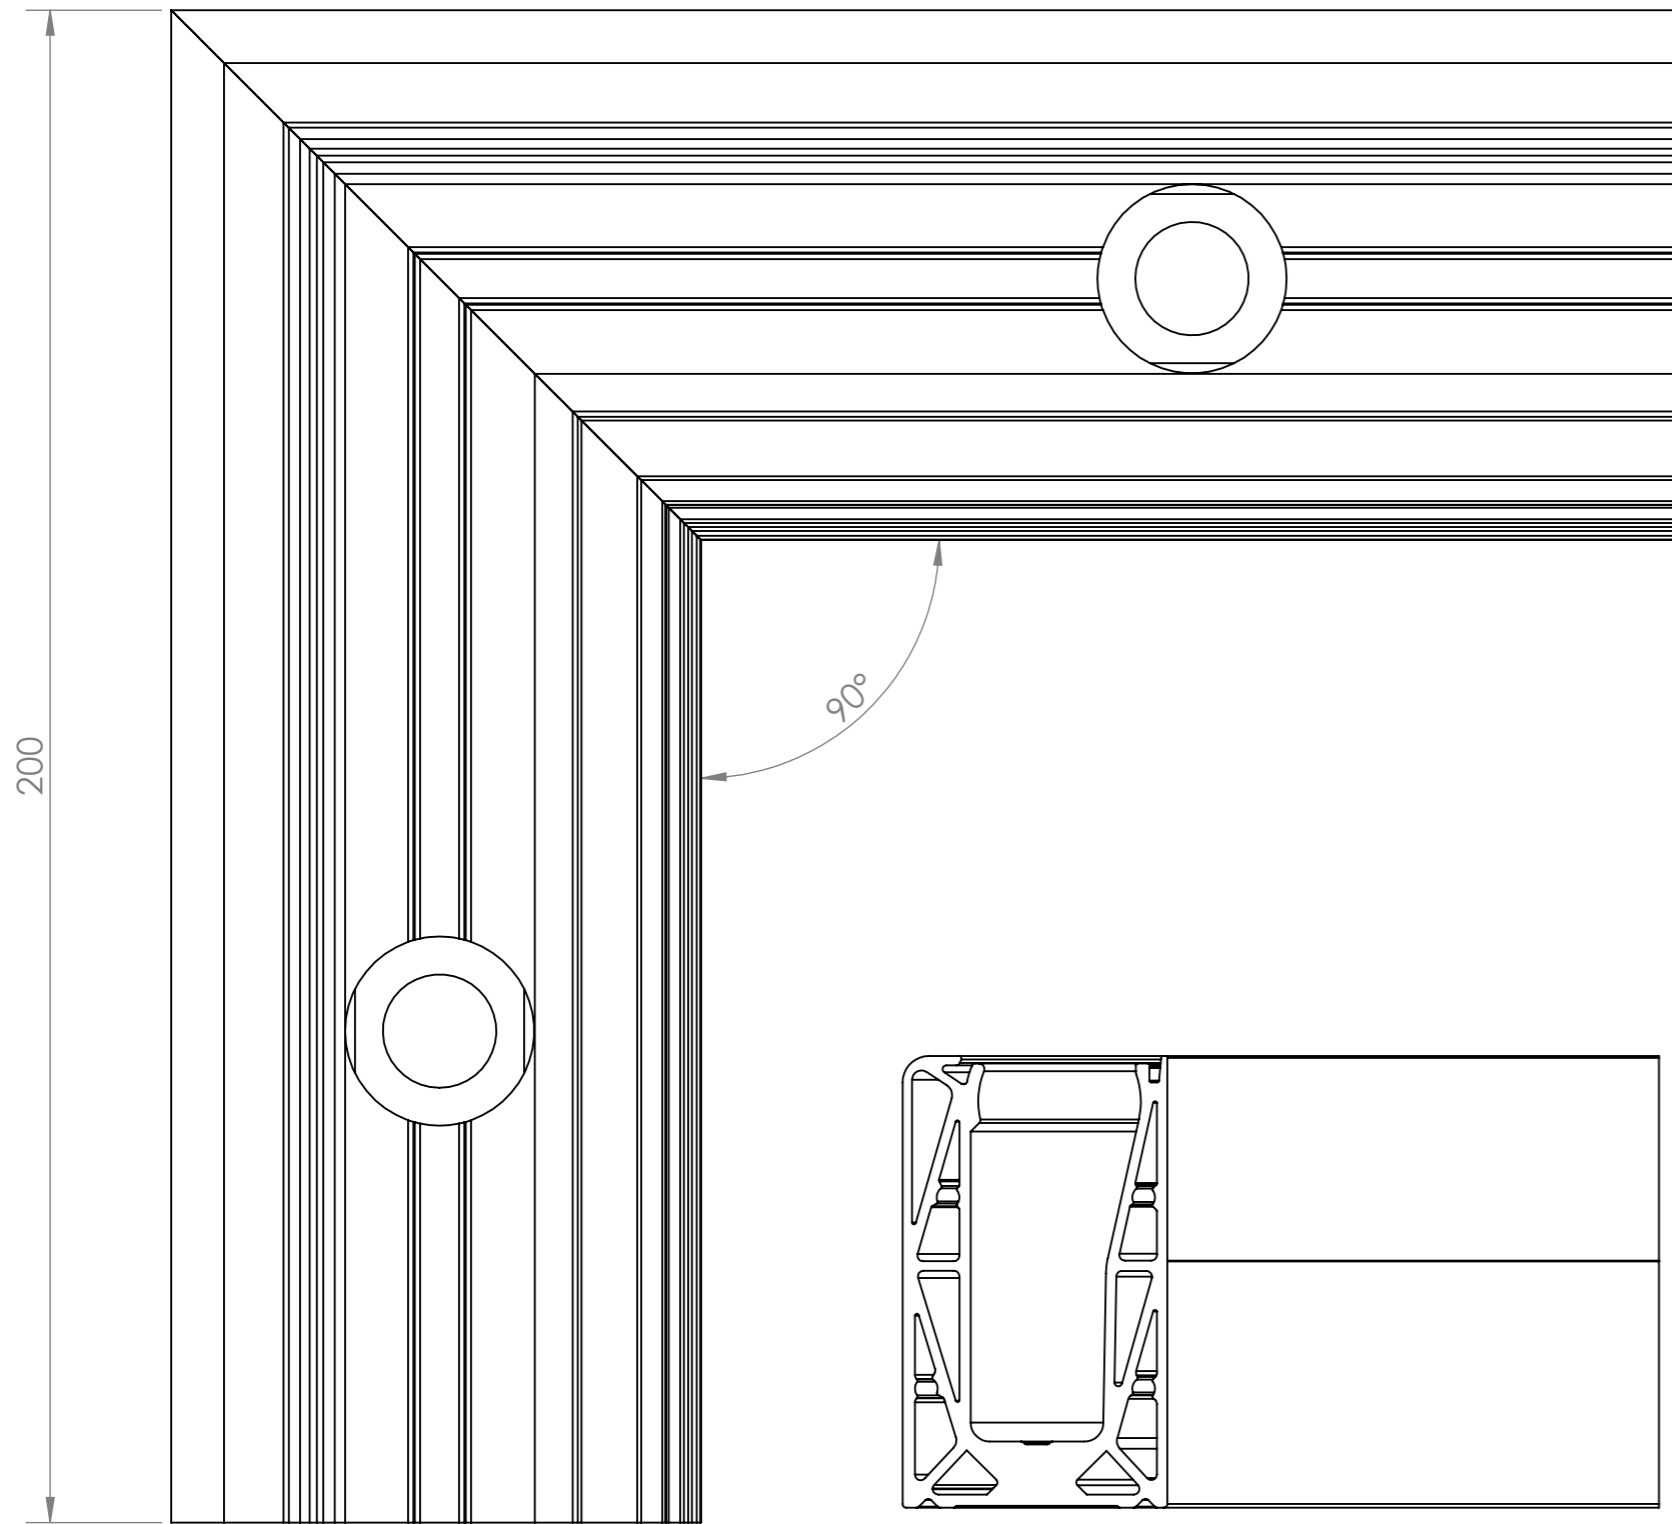

Top


Right
SCALE 1:2

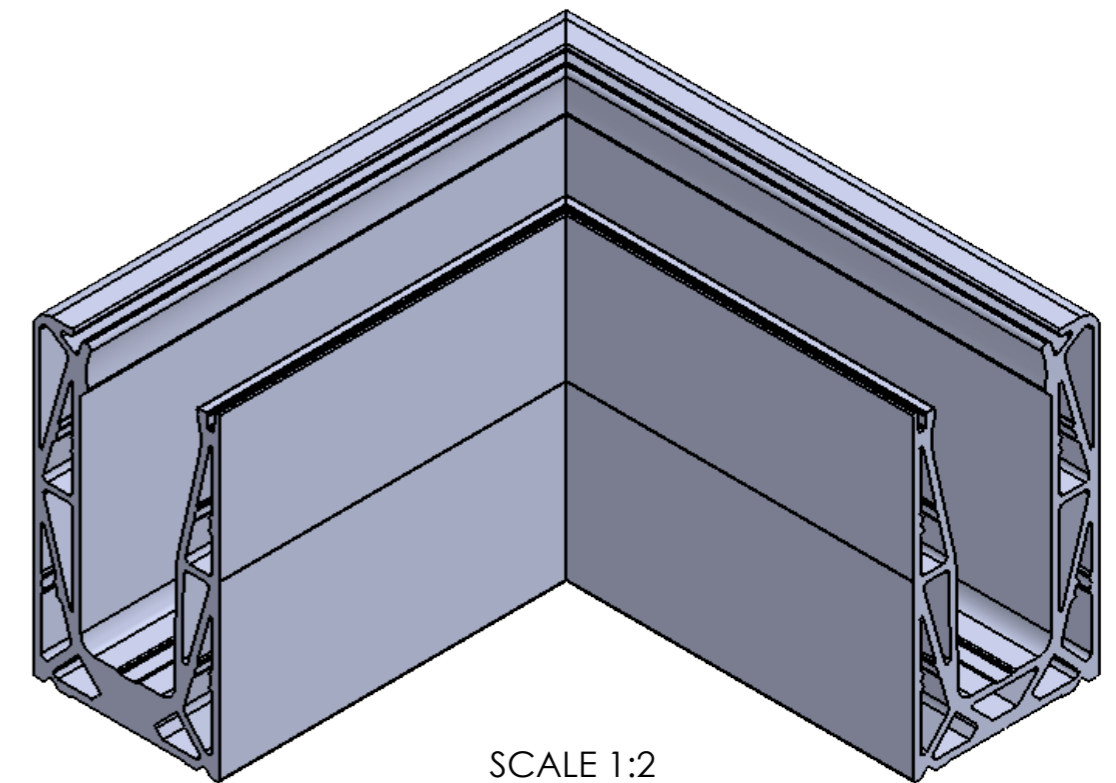

SCALE 1:2


R-Lock Side Mount
90° Internal Corner Section
(200mm)

DO NOT SCALE
Units - Millimetres

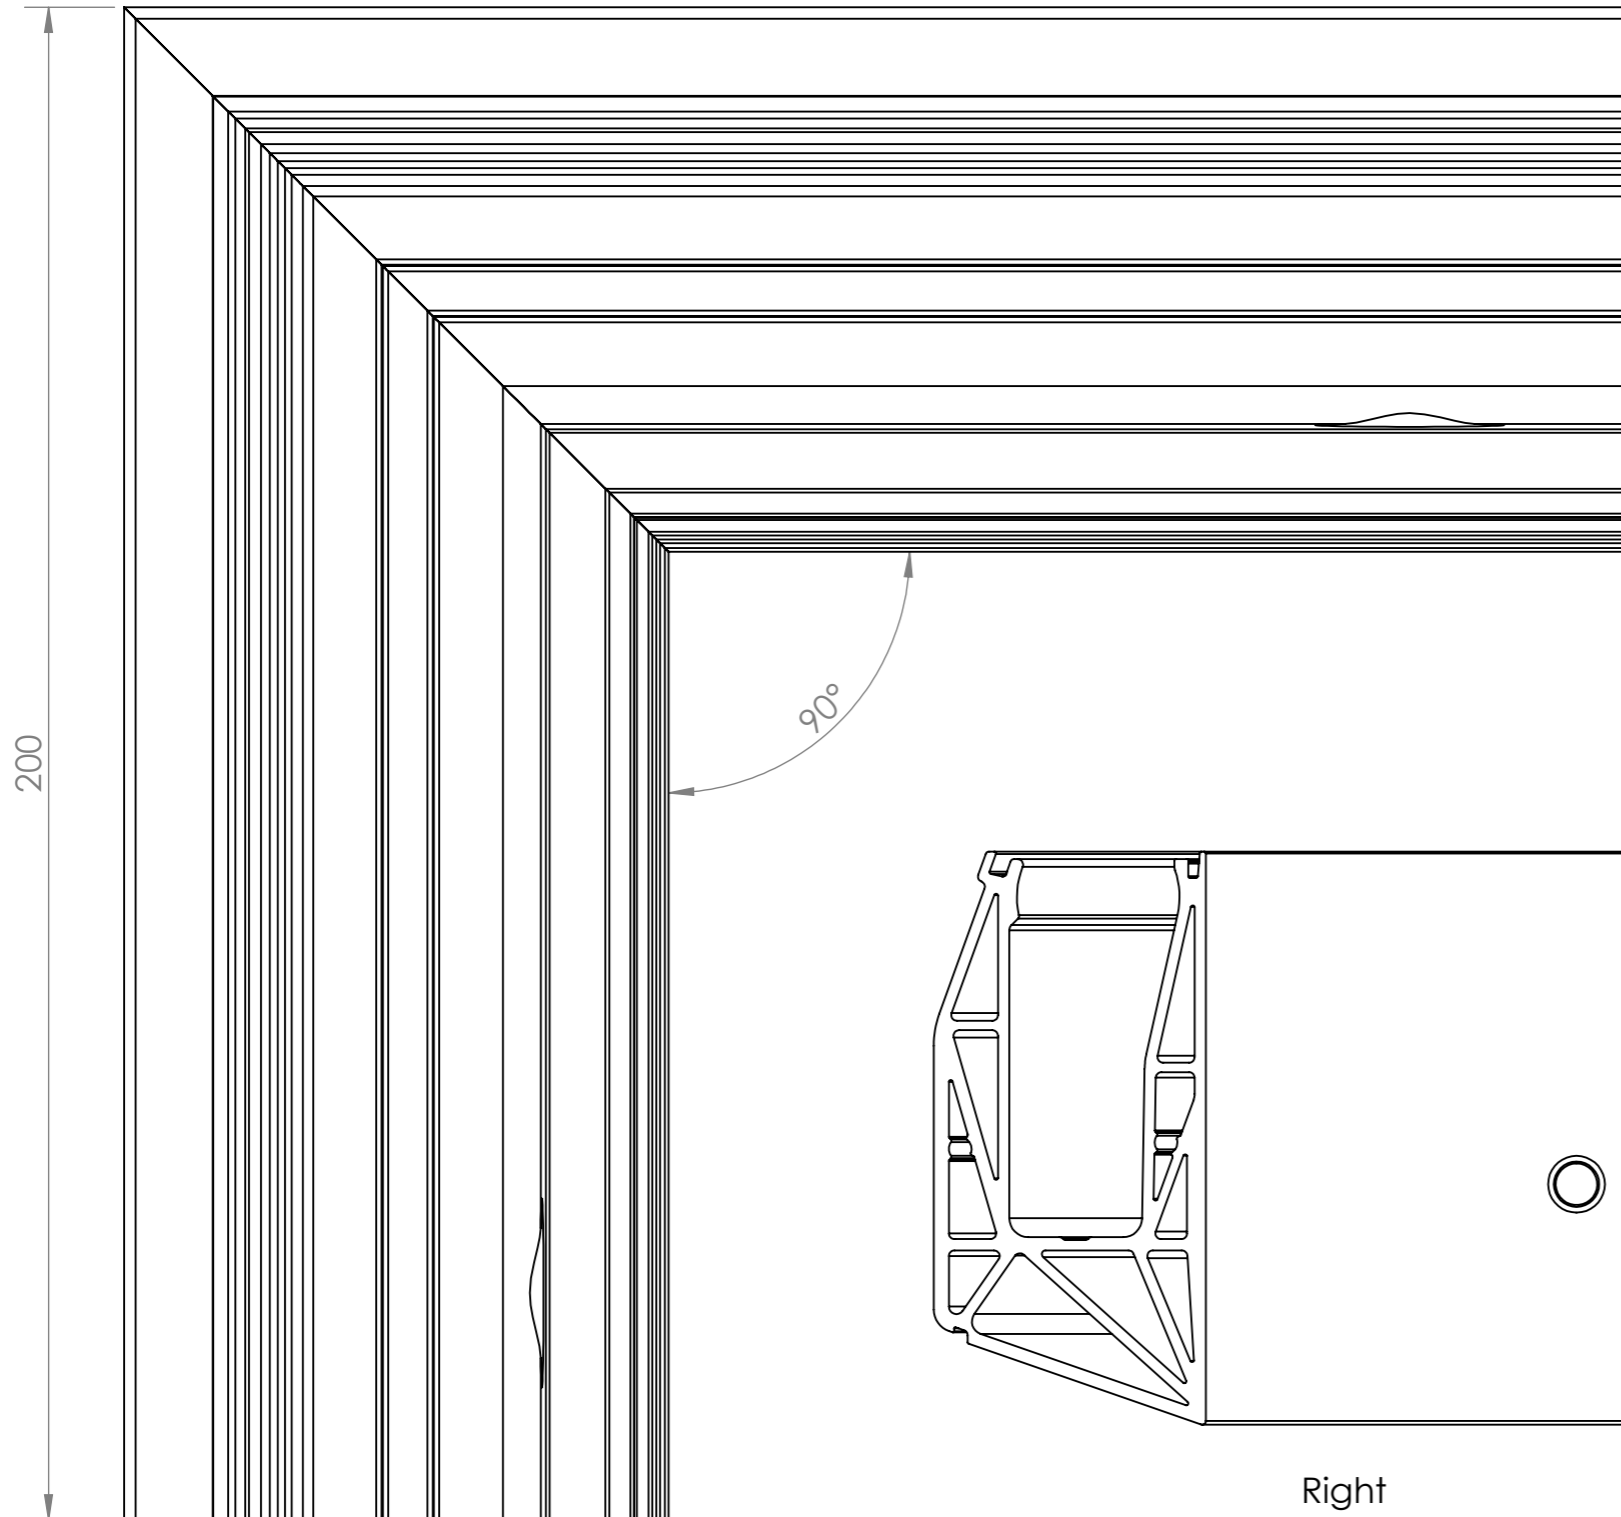

Top


Right
SCALE 1:2

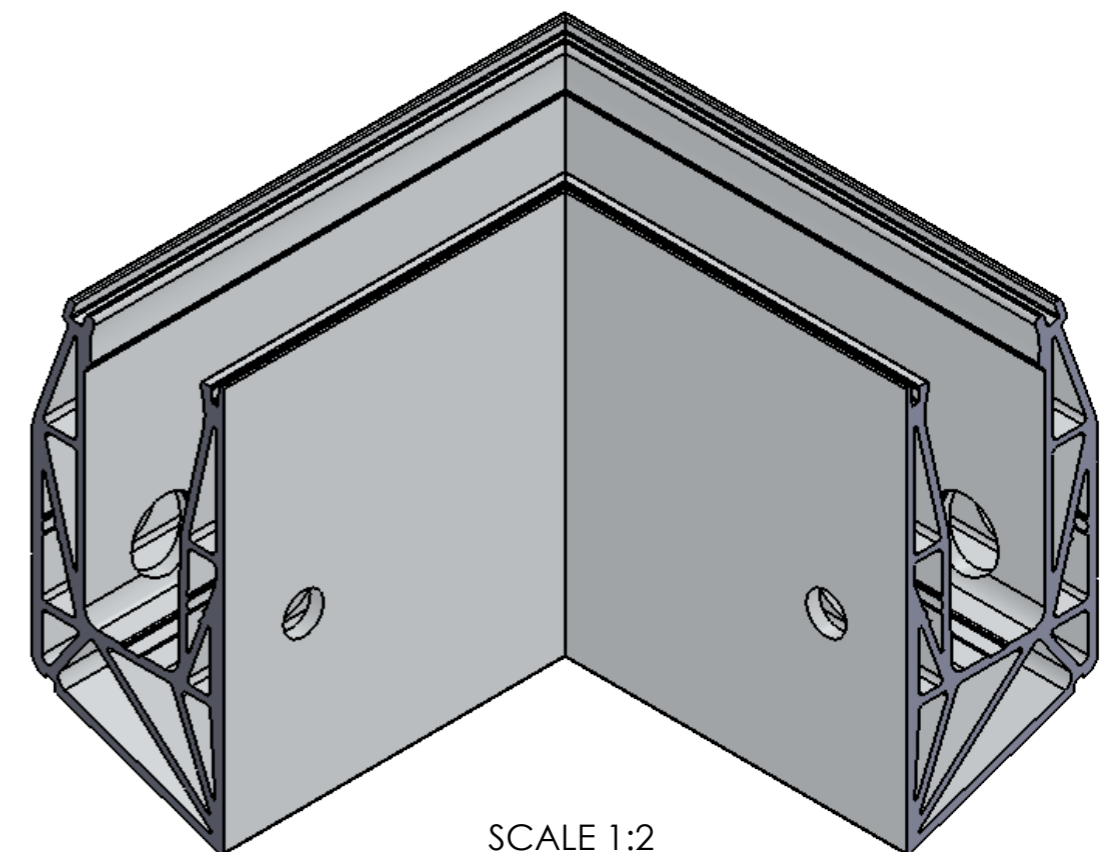

SCALE 1:2


R-Lock Base Mount
135° Internal Corner Section

DO NOT SCALE
Units - Millimetres

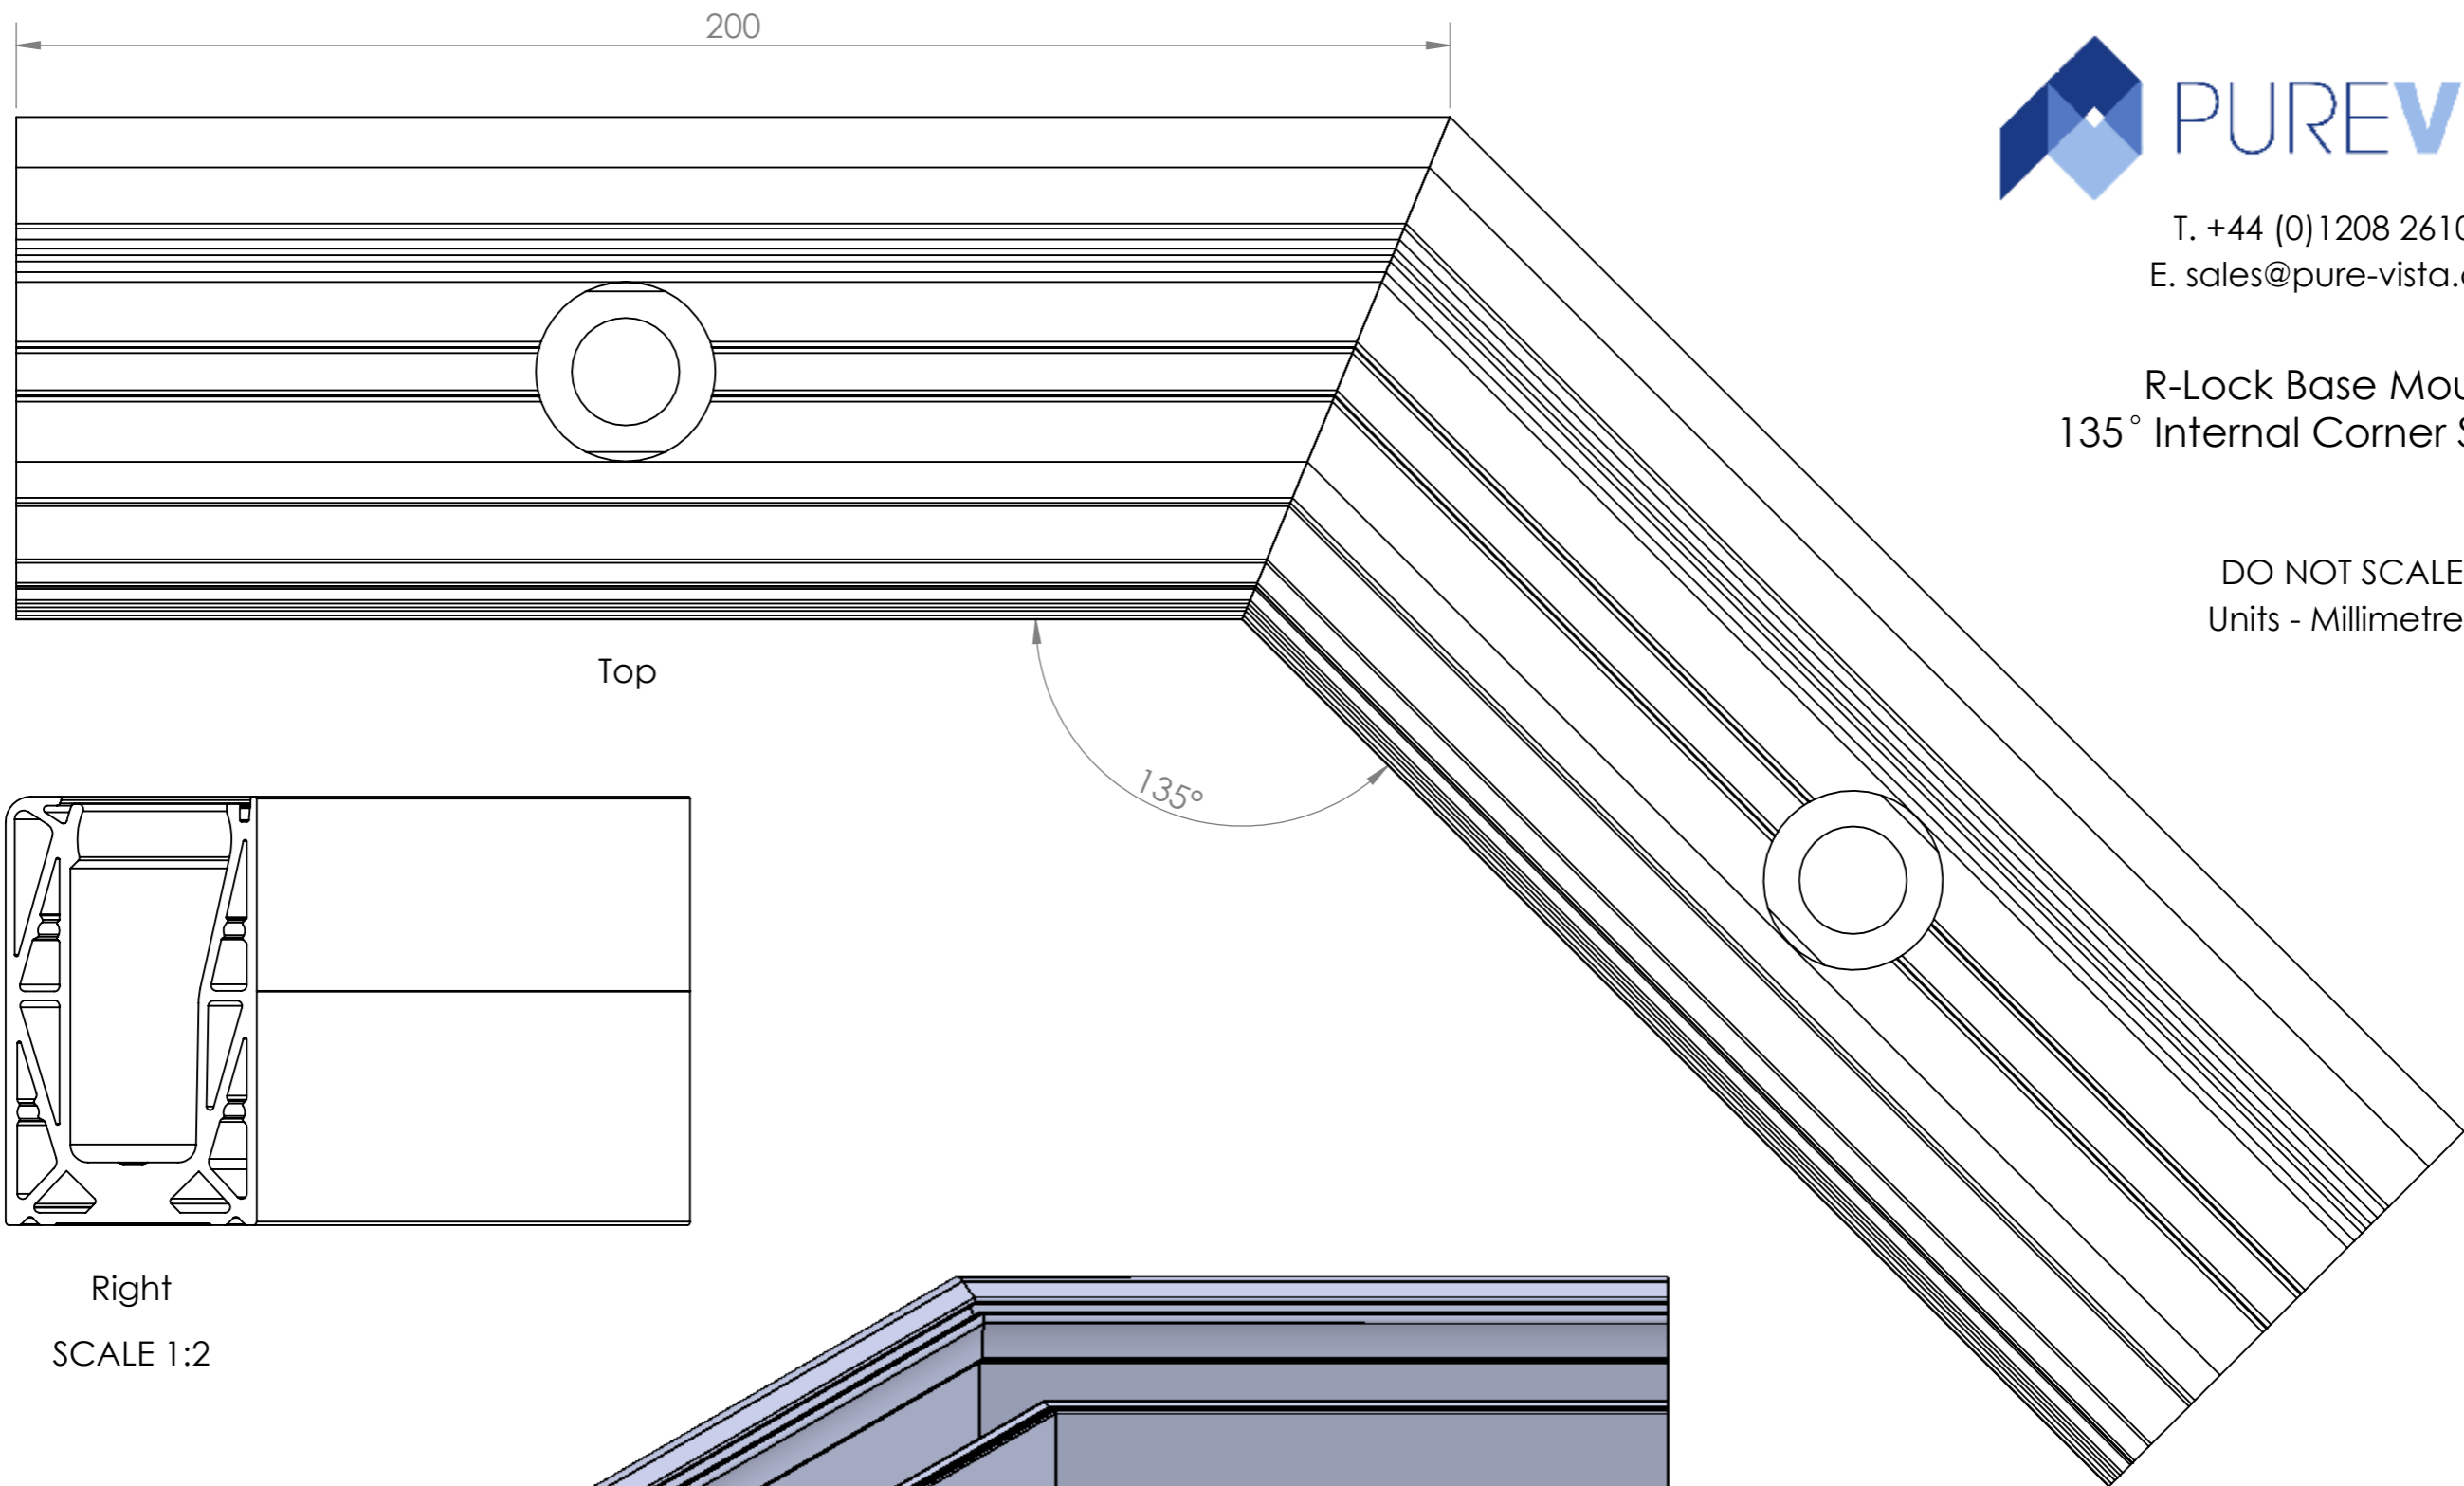


Top

135°

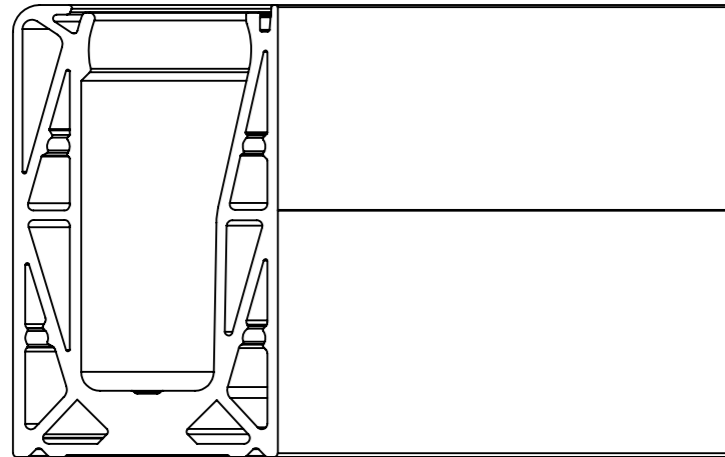


Right
SCALE 1:2

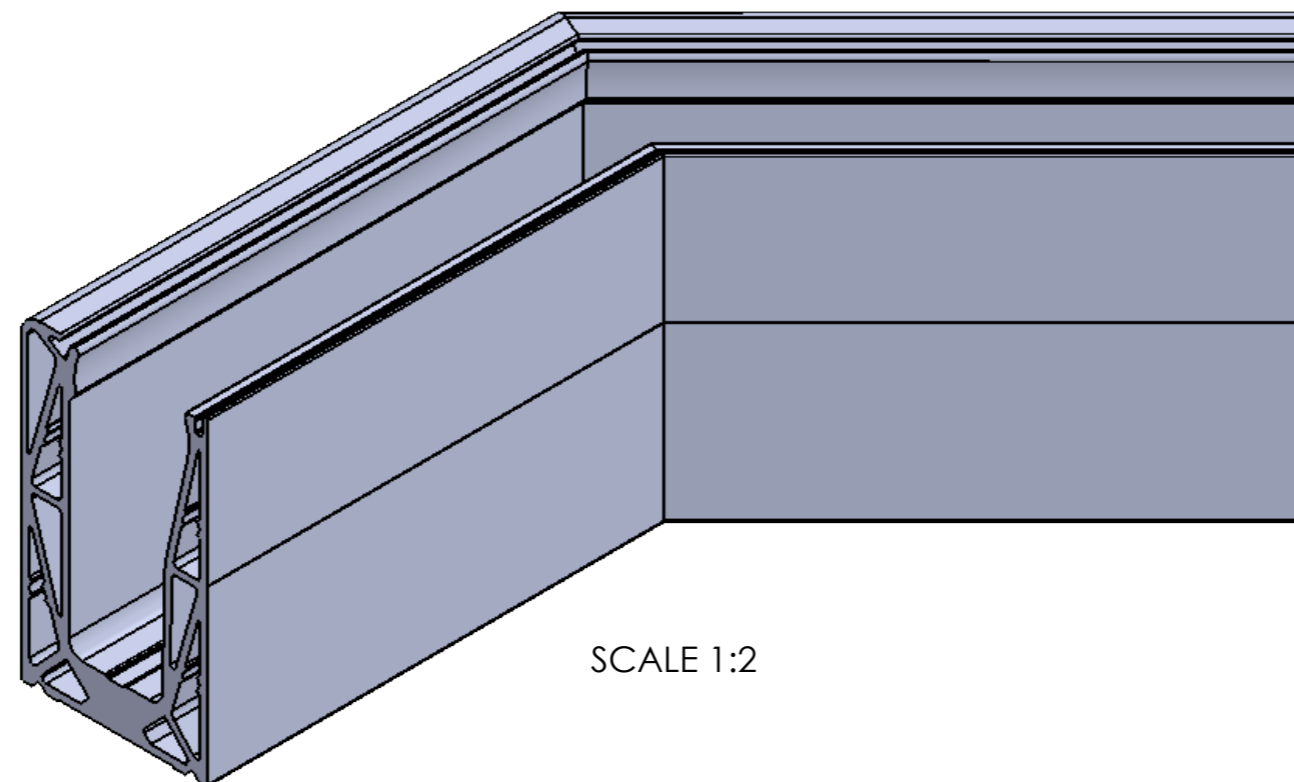

SCALE 1:2


R-Lock Side Mount
135° Internal Corner Section

DO NOT SCALE
Units - Millimetres

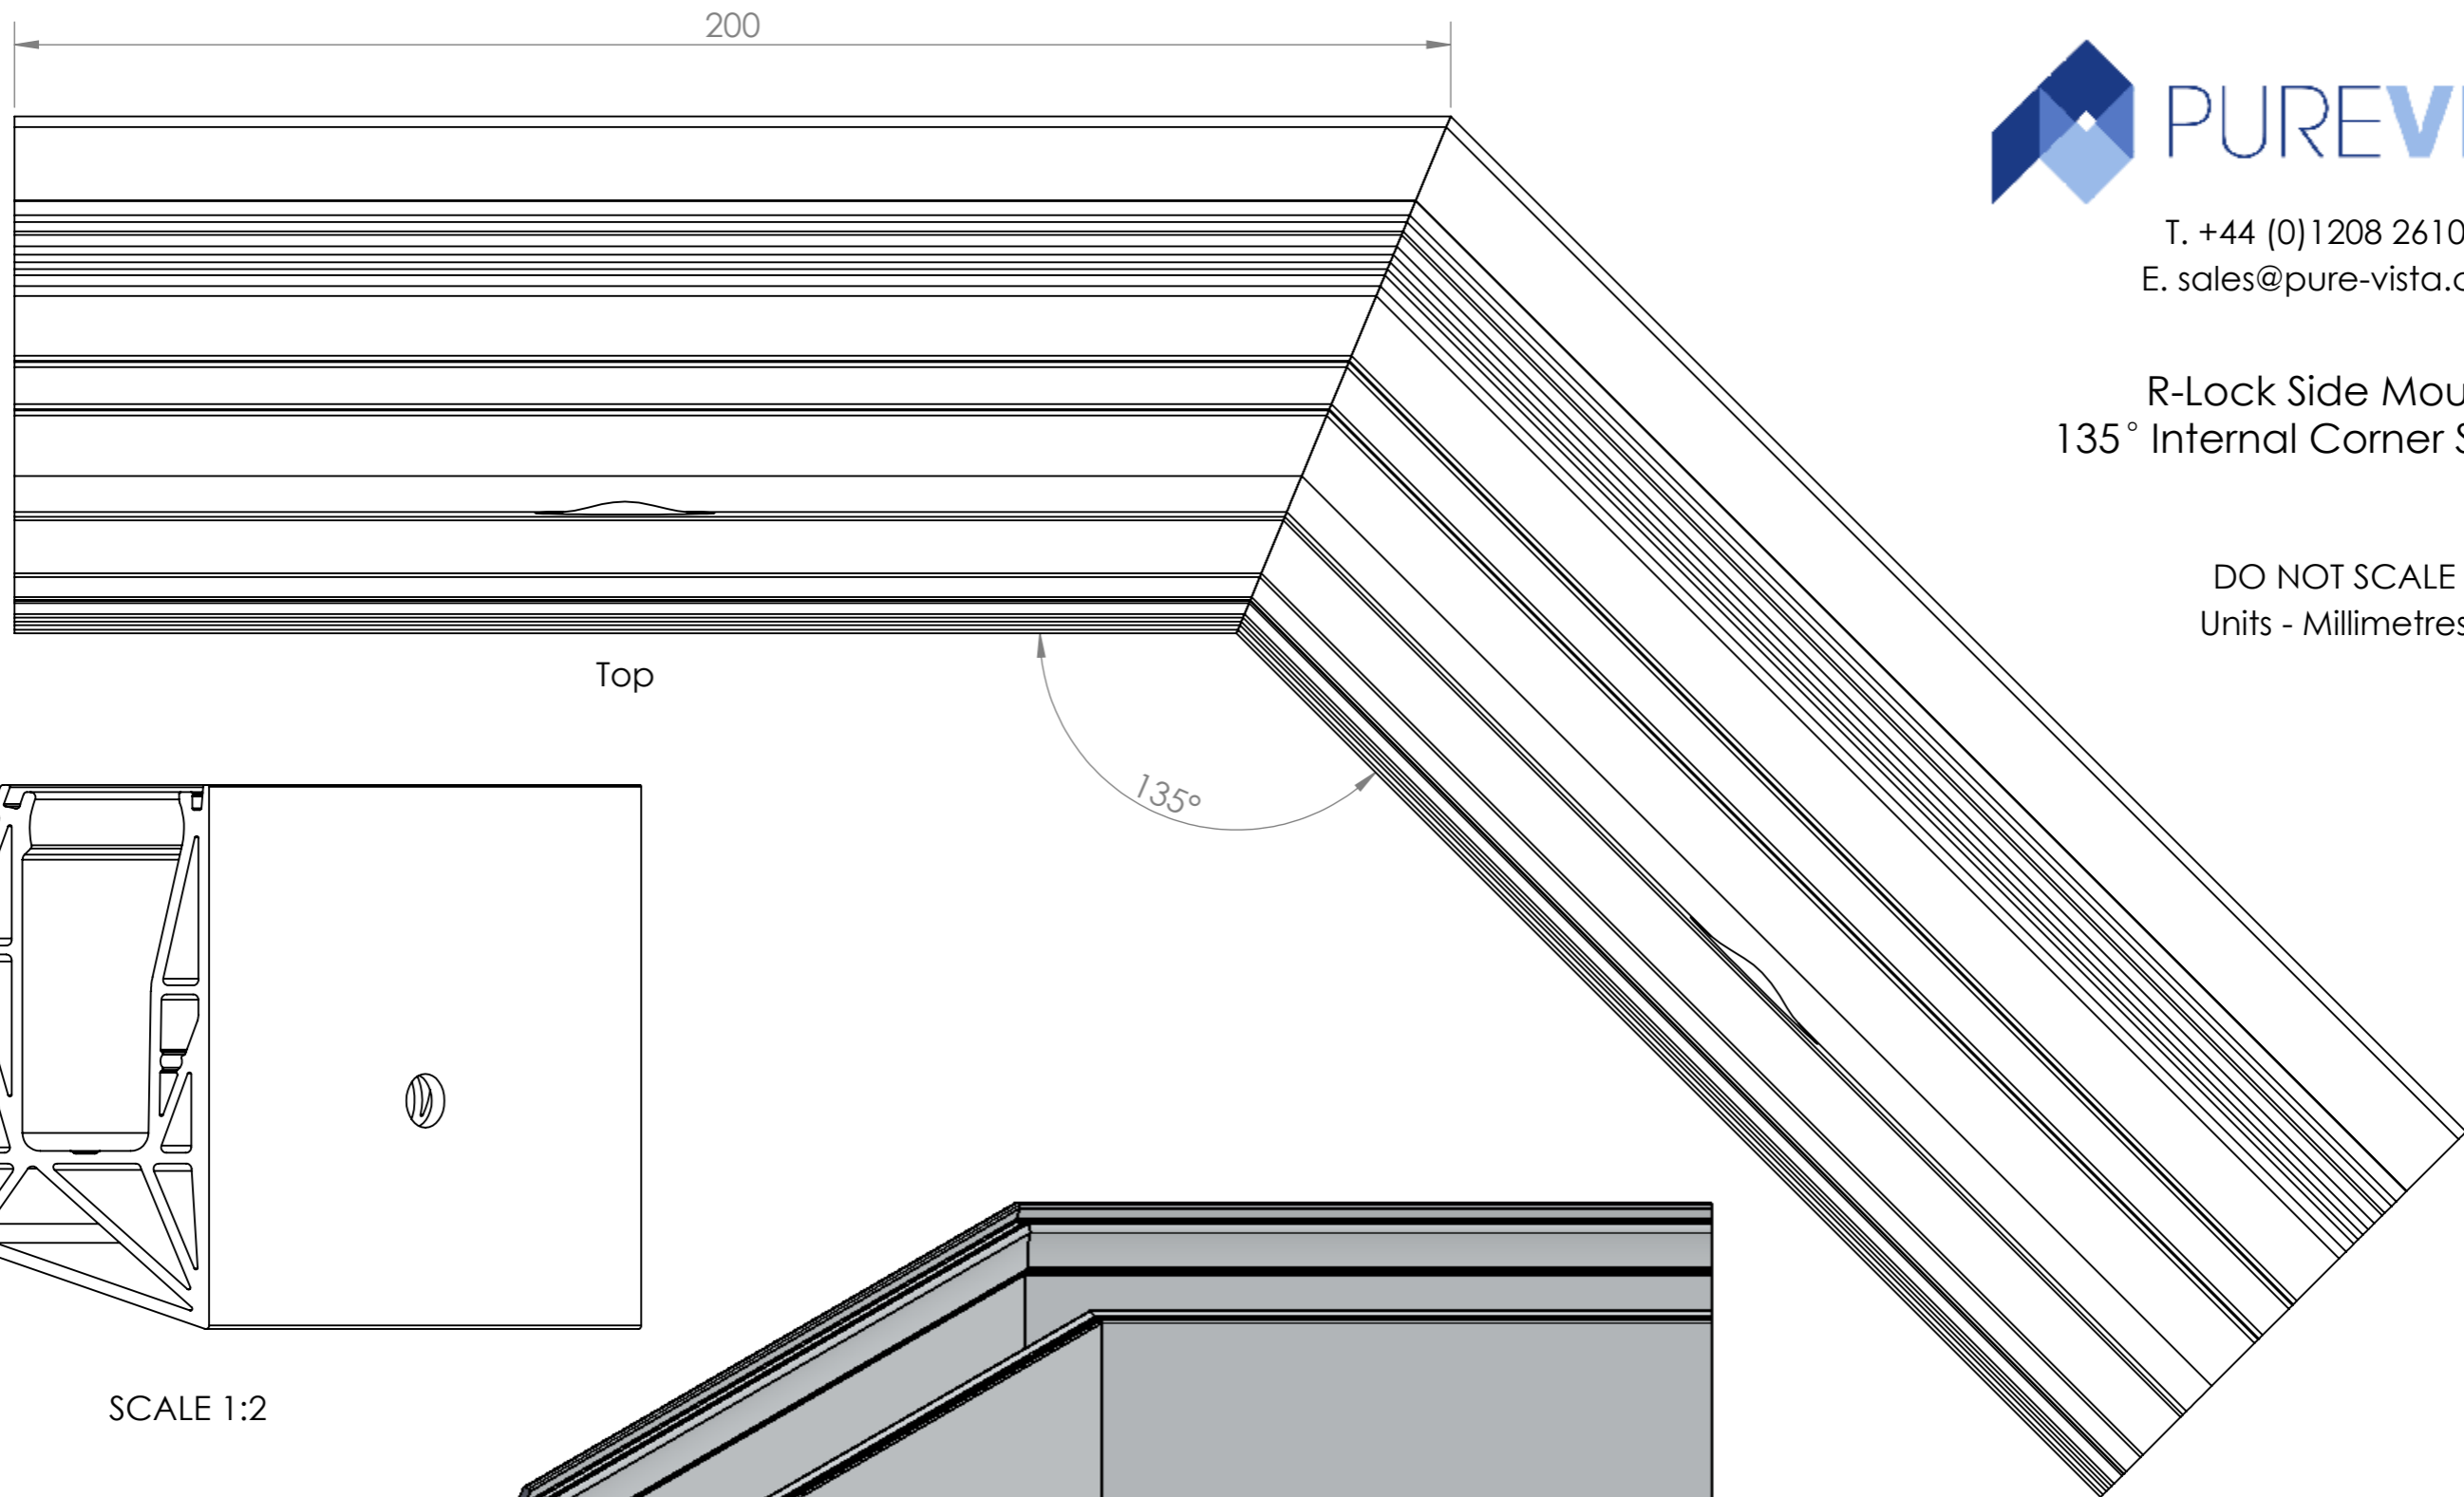


Top

135°

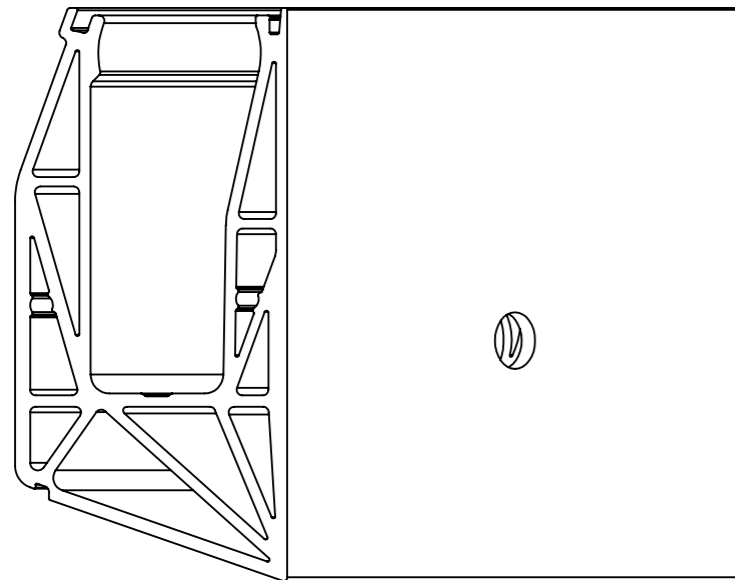



SCALE 1:2

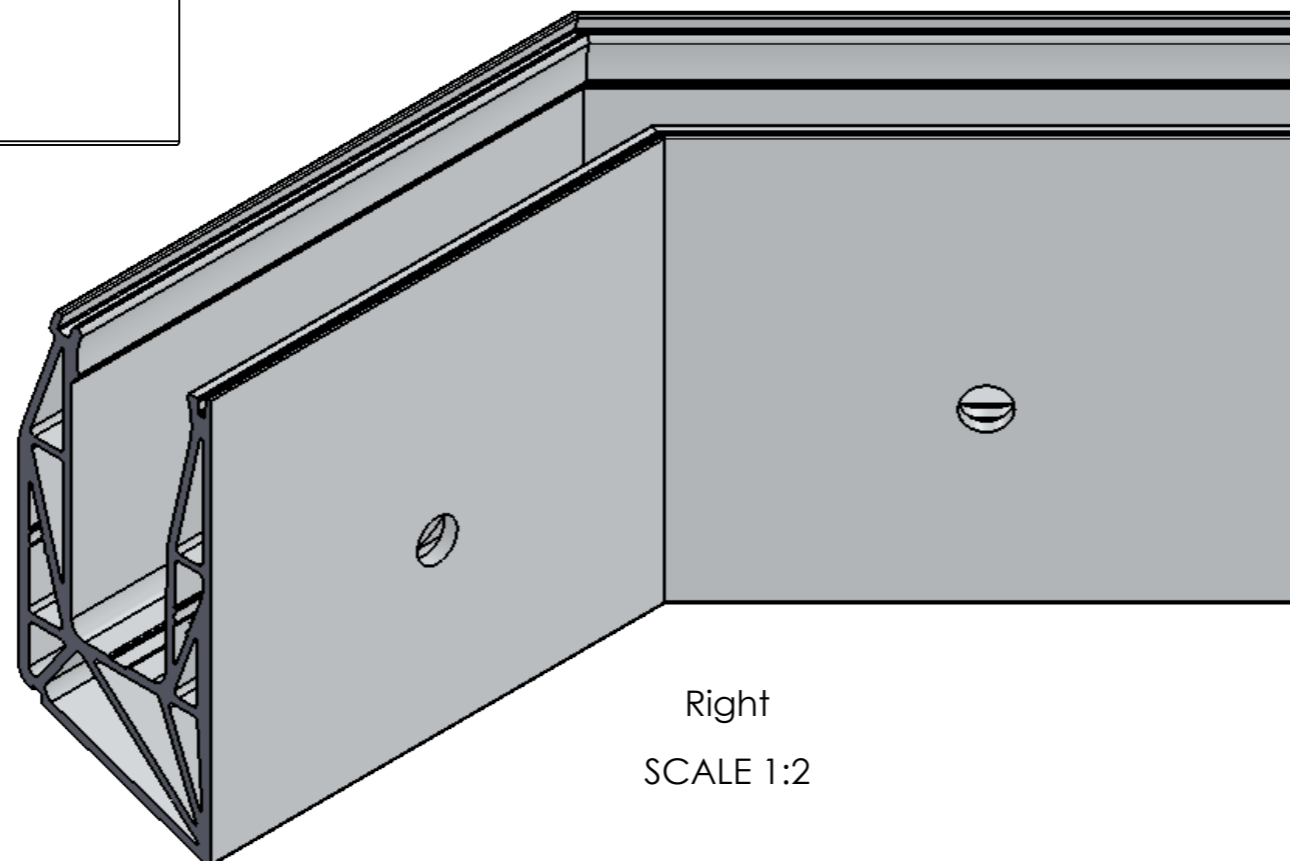

Right
SCALE 1:2

R-Lock Base Mount
90° External Corner Section


DO NOT SCALE
Units - Millimetres

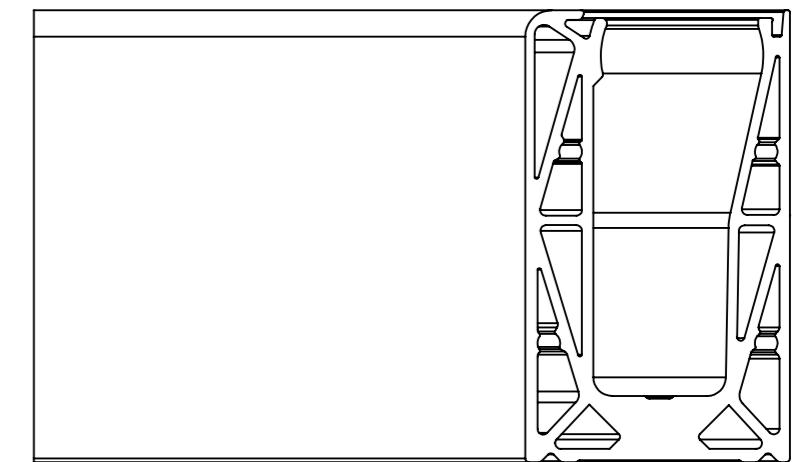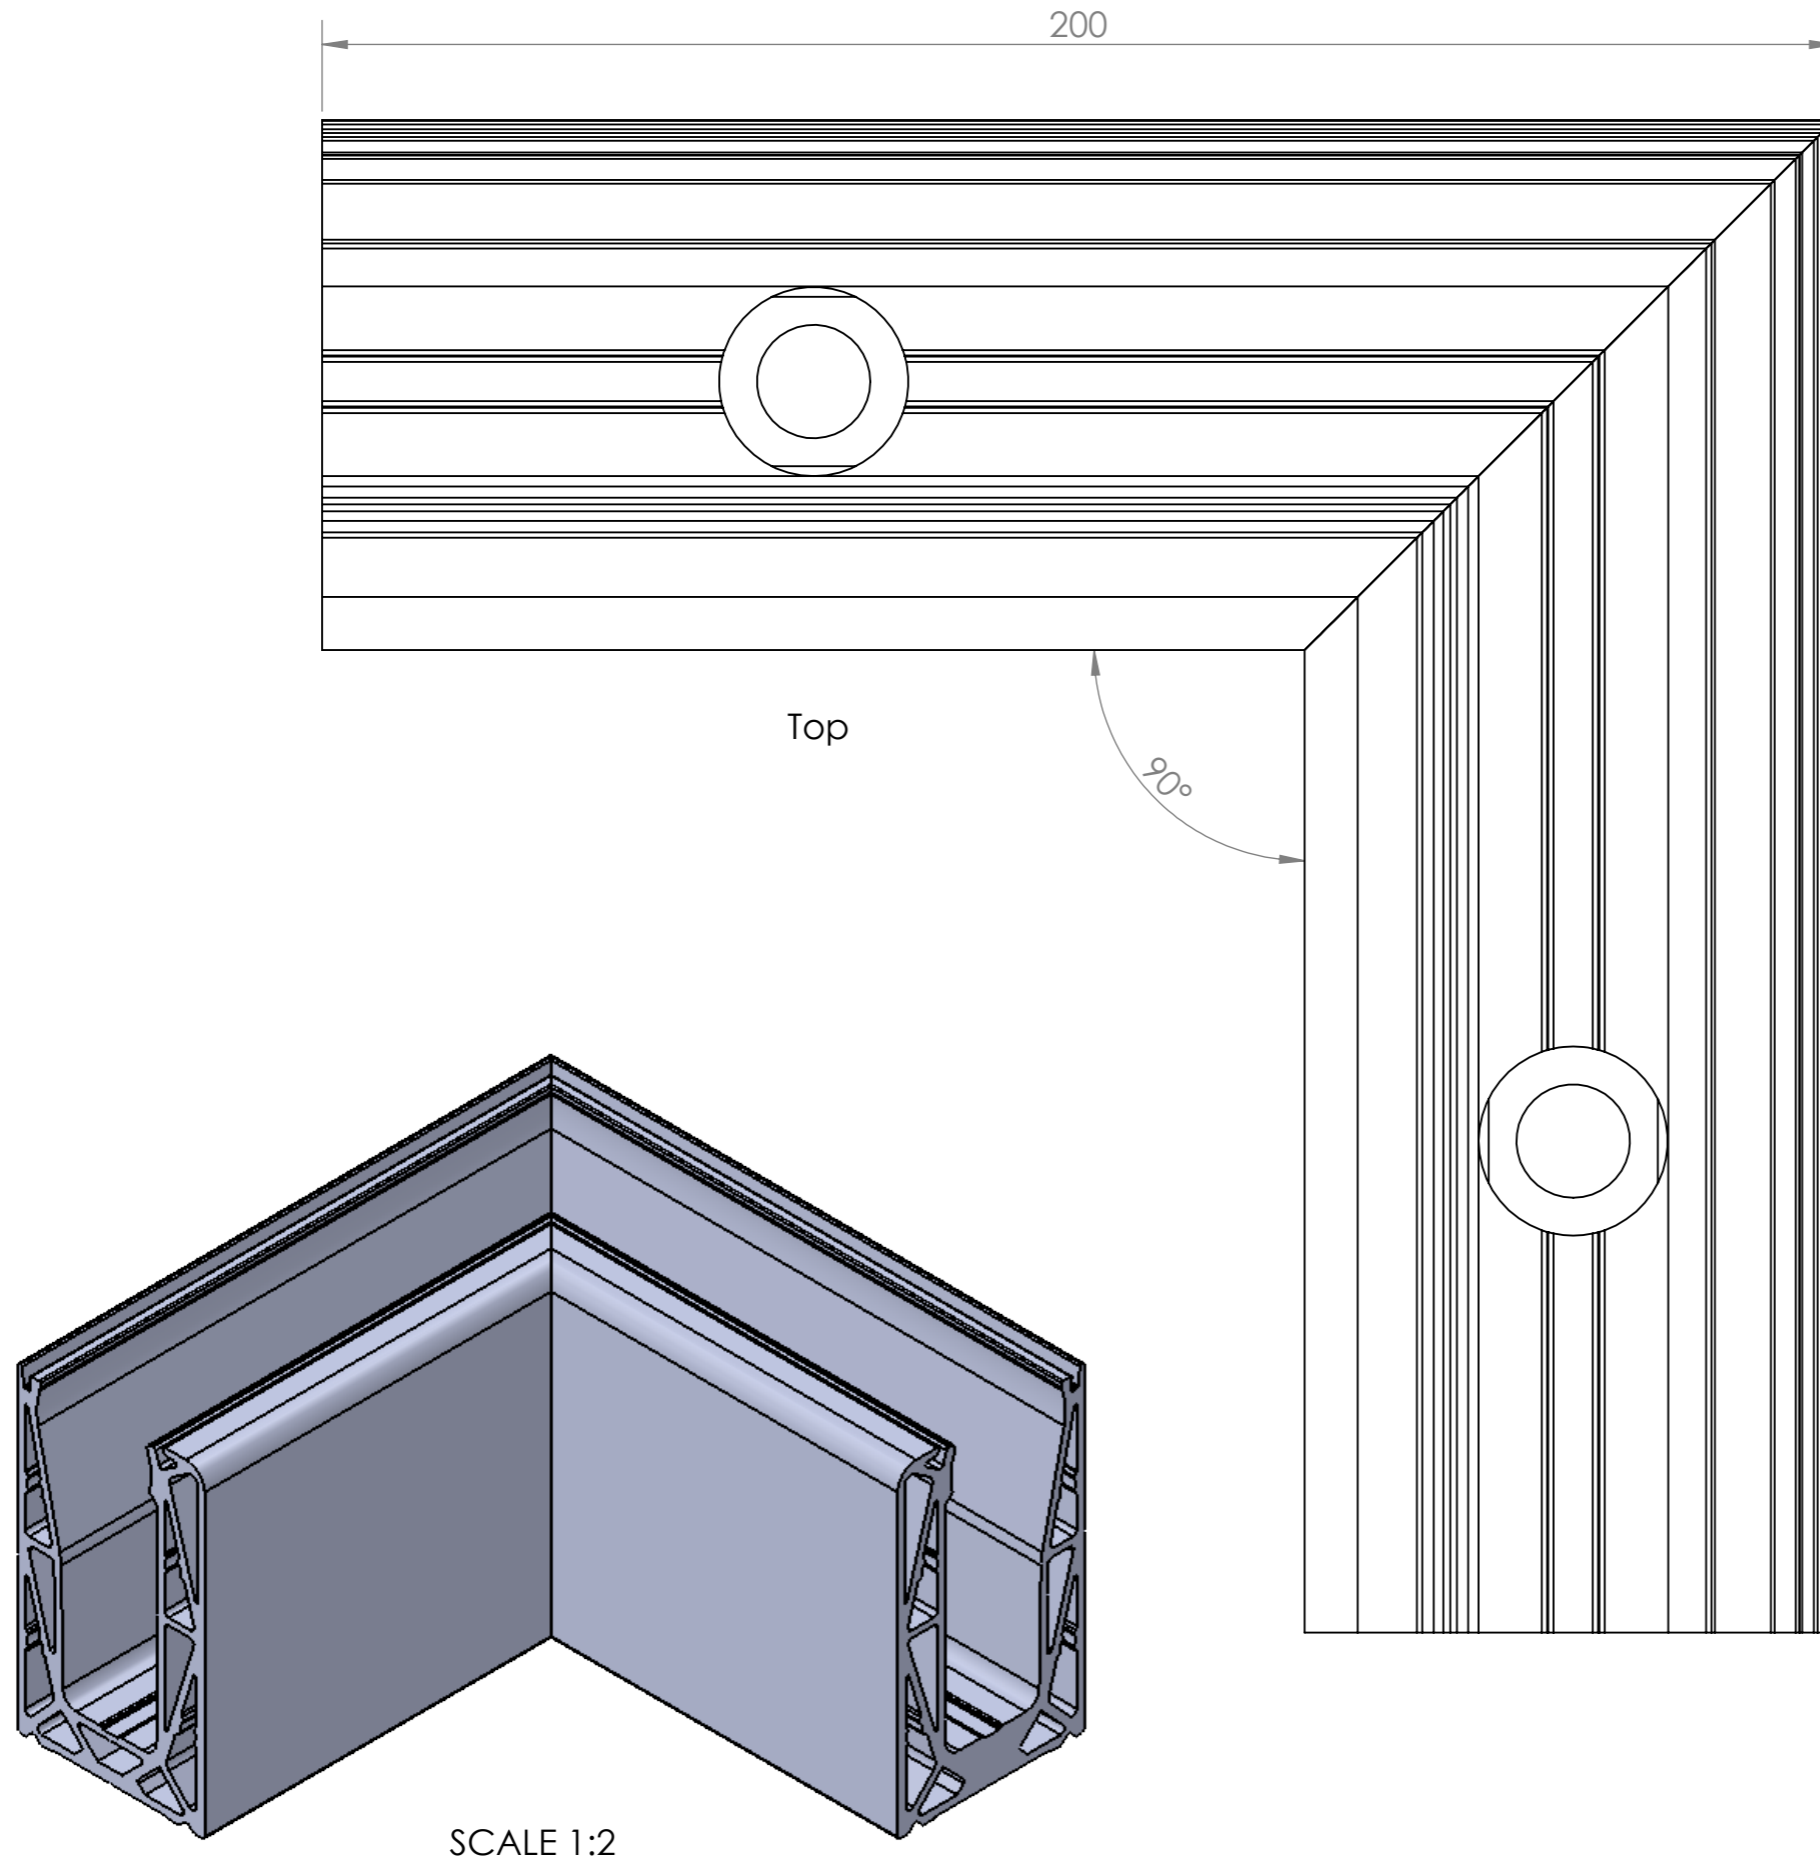



Right
SCALE 1:2

R-Lock Side Mount
90° External Corner Section

DO NOT SCALE
Units - Millimetres

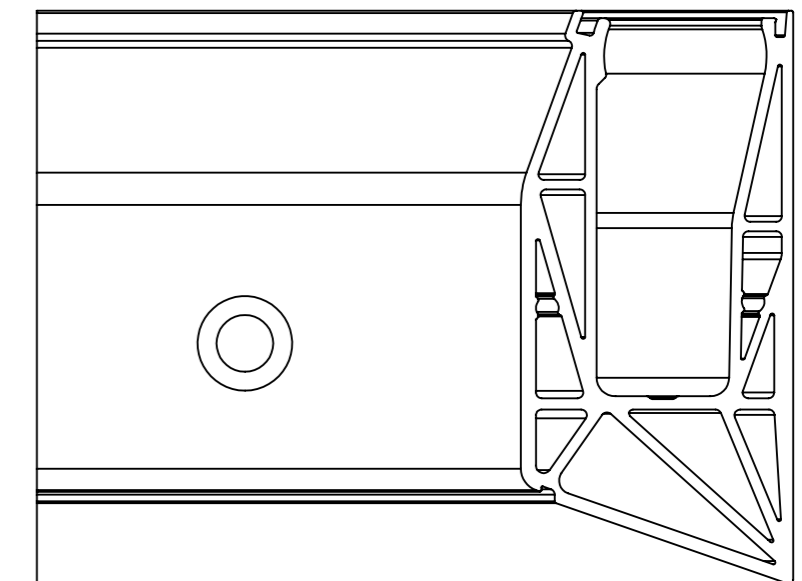


Right
SCALE 1:2

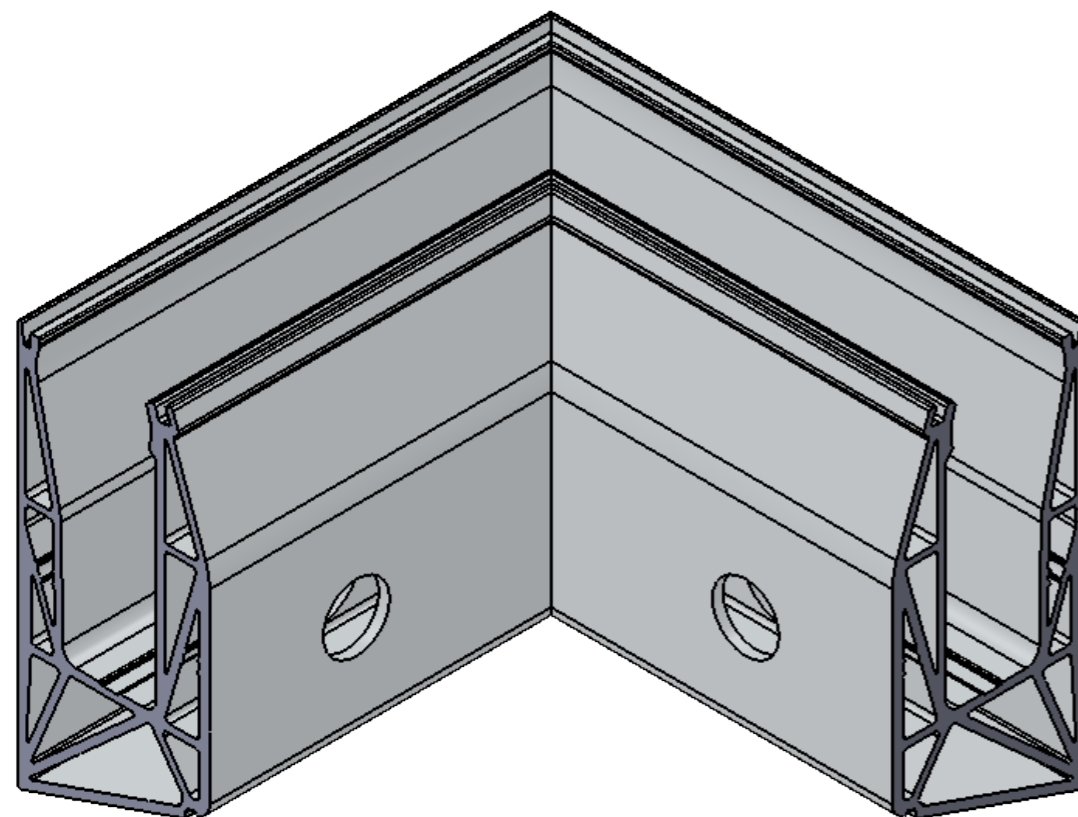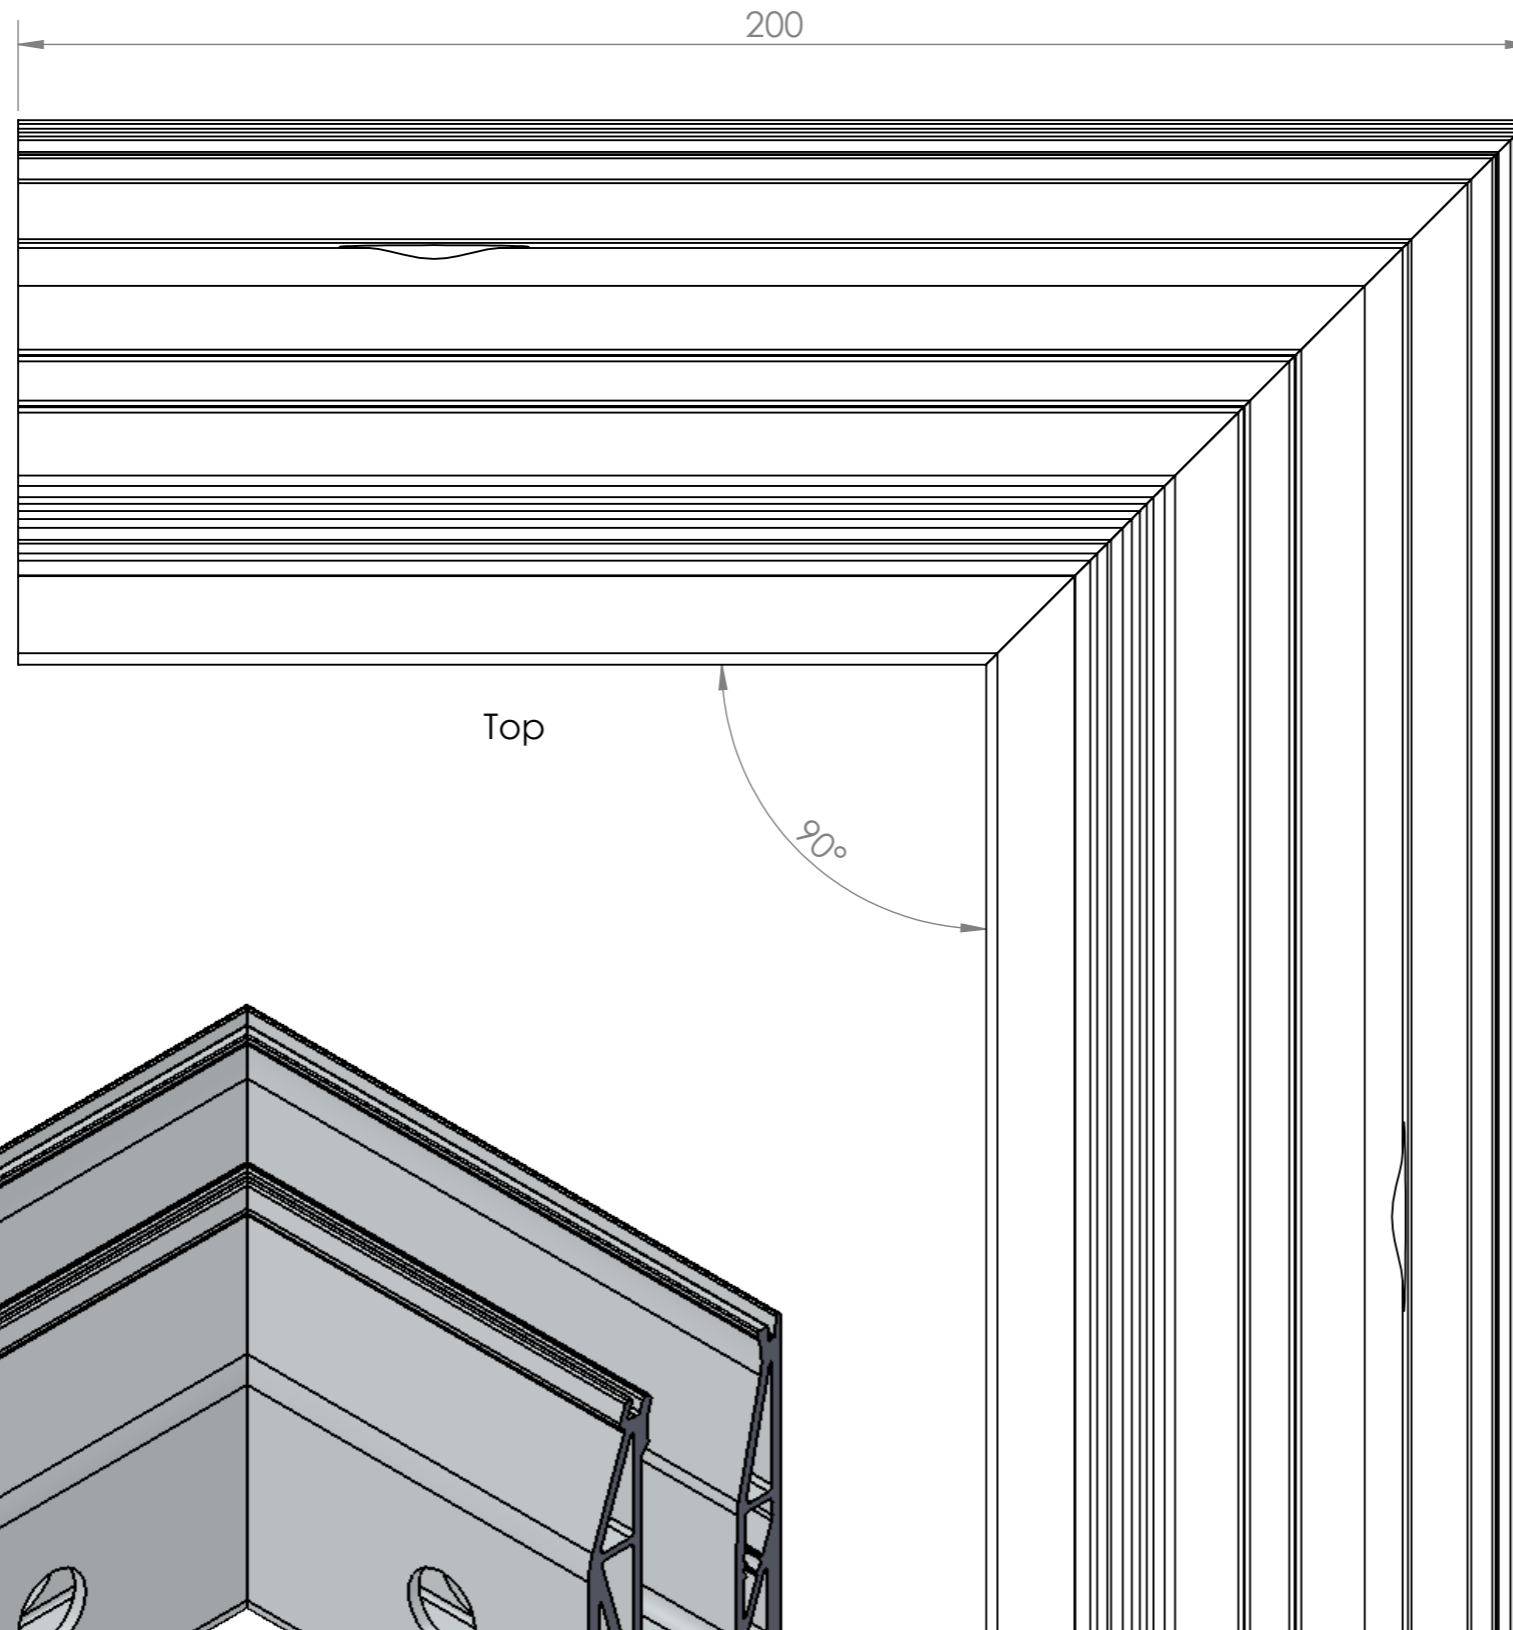


SCALE 1:2

R-Lock Base Mount
135° External Corner Section

DO NOT SCALE
Units - Millimetres

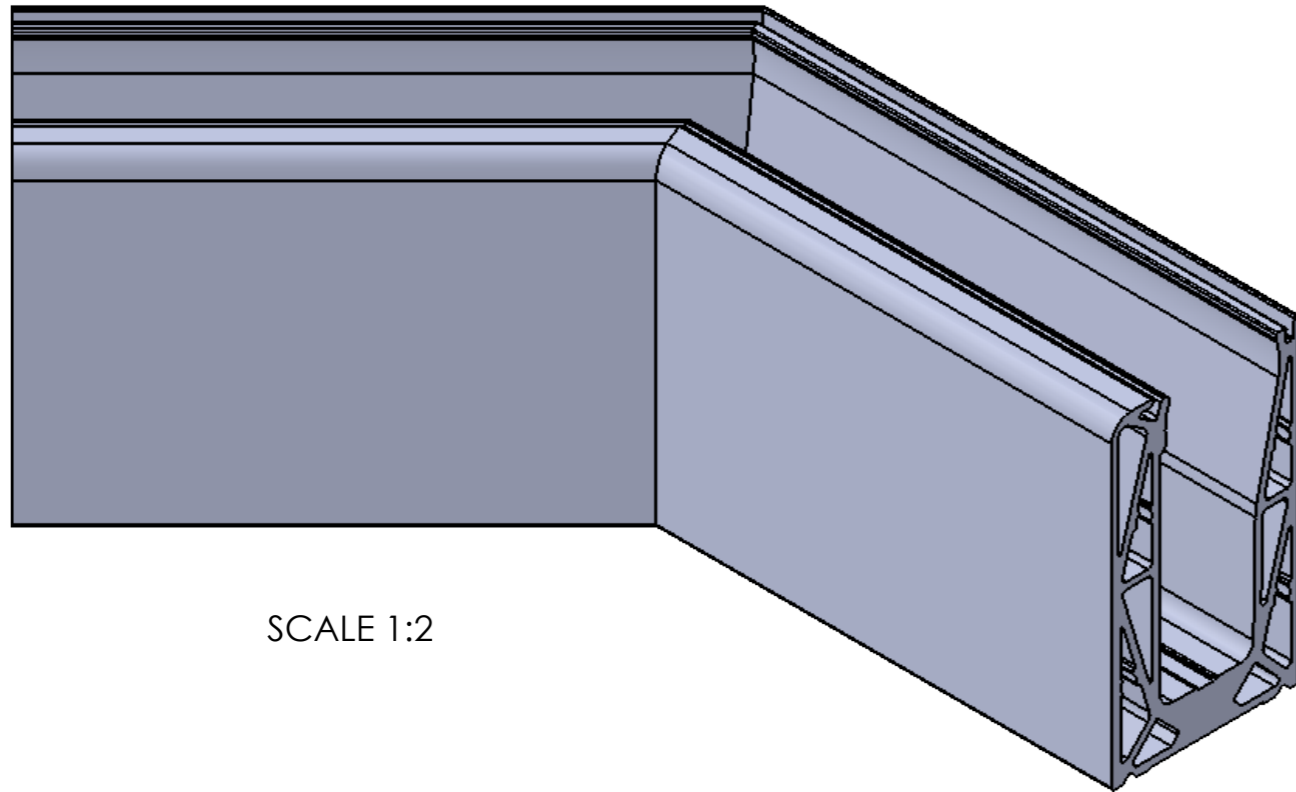

SCALE 1:2

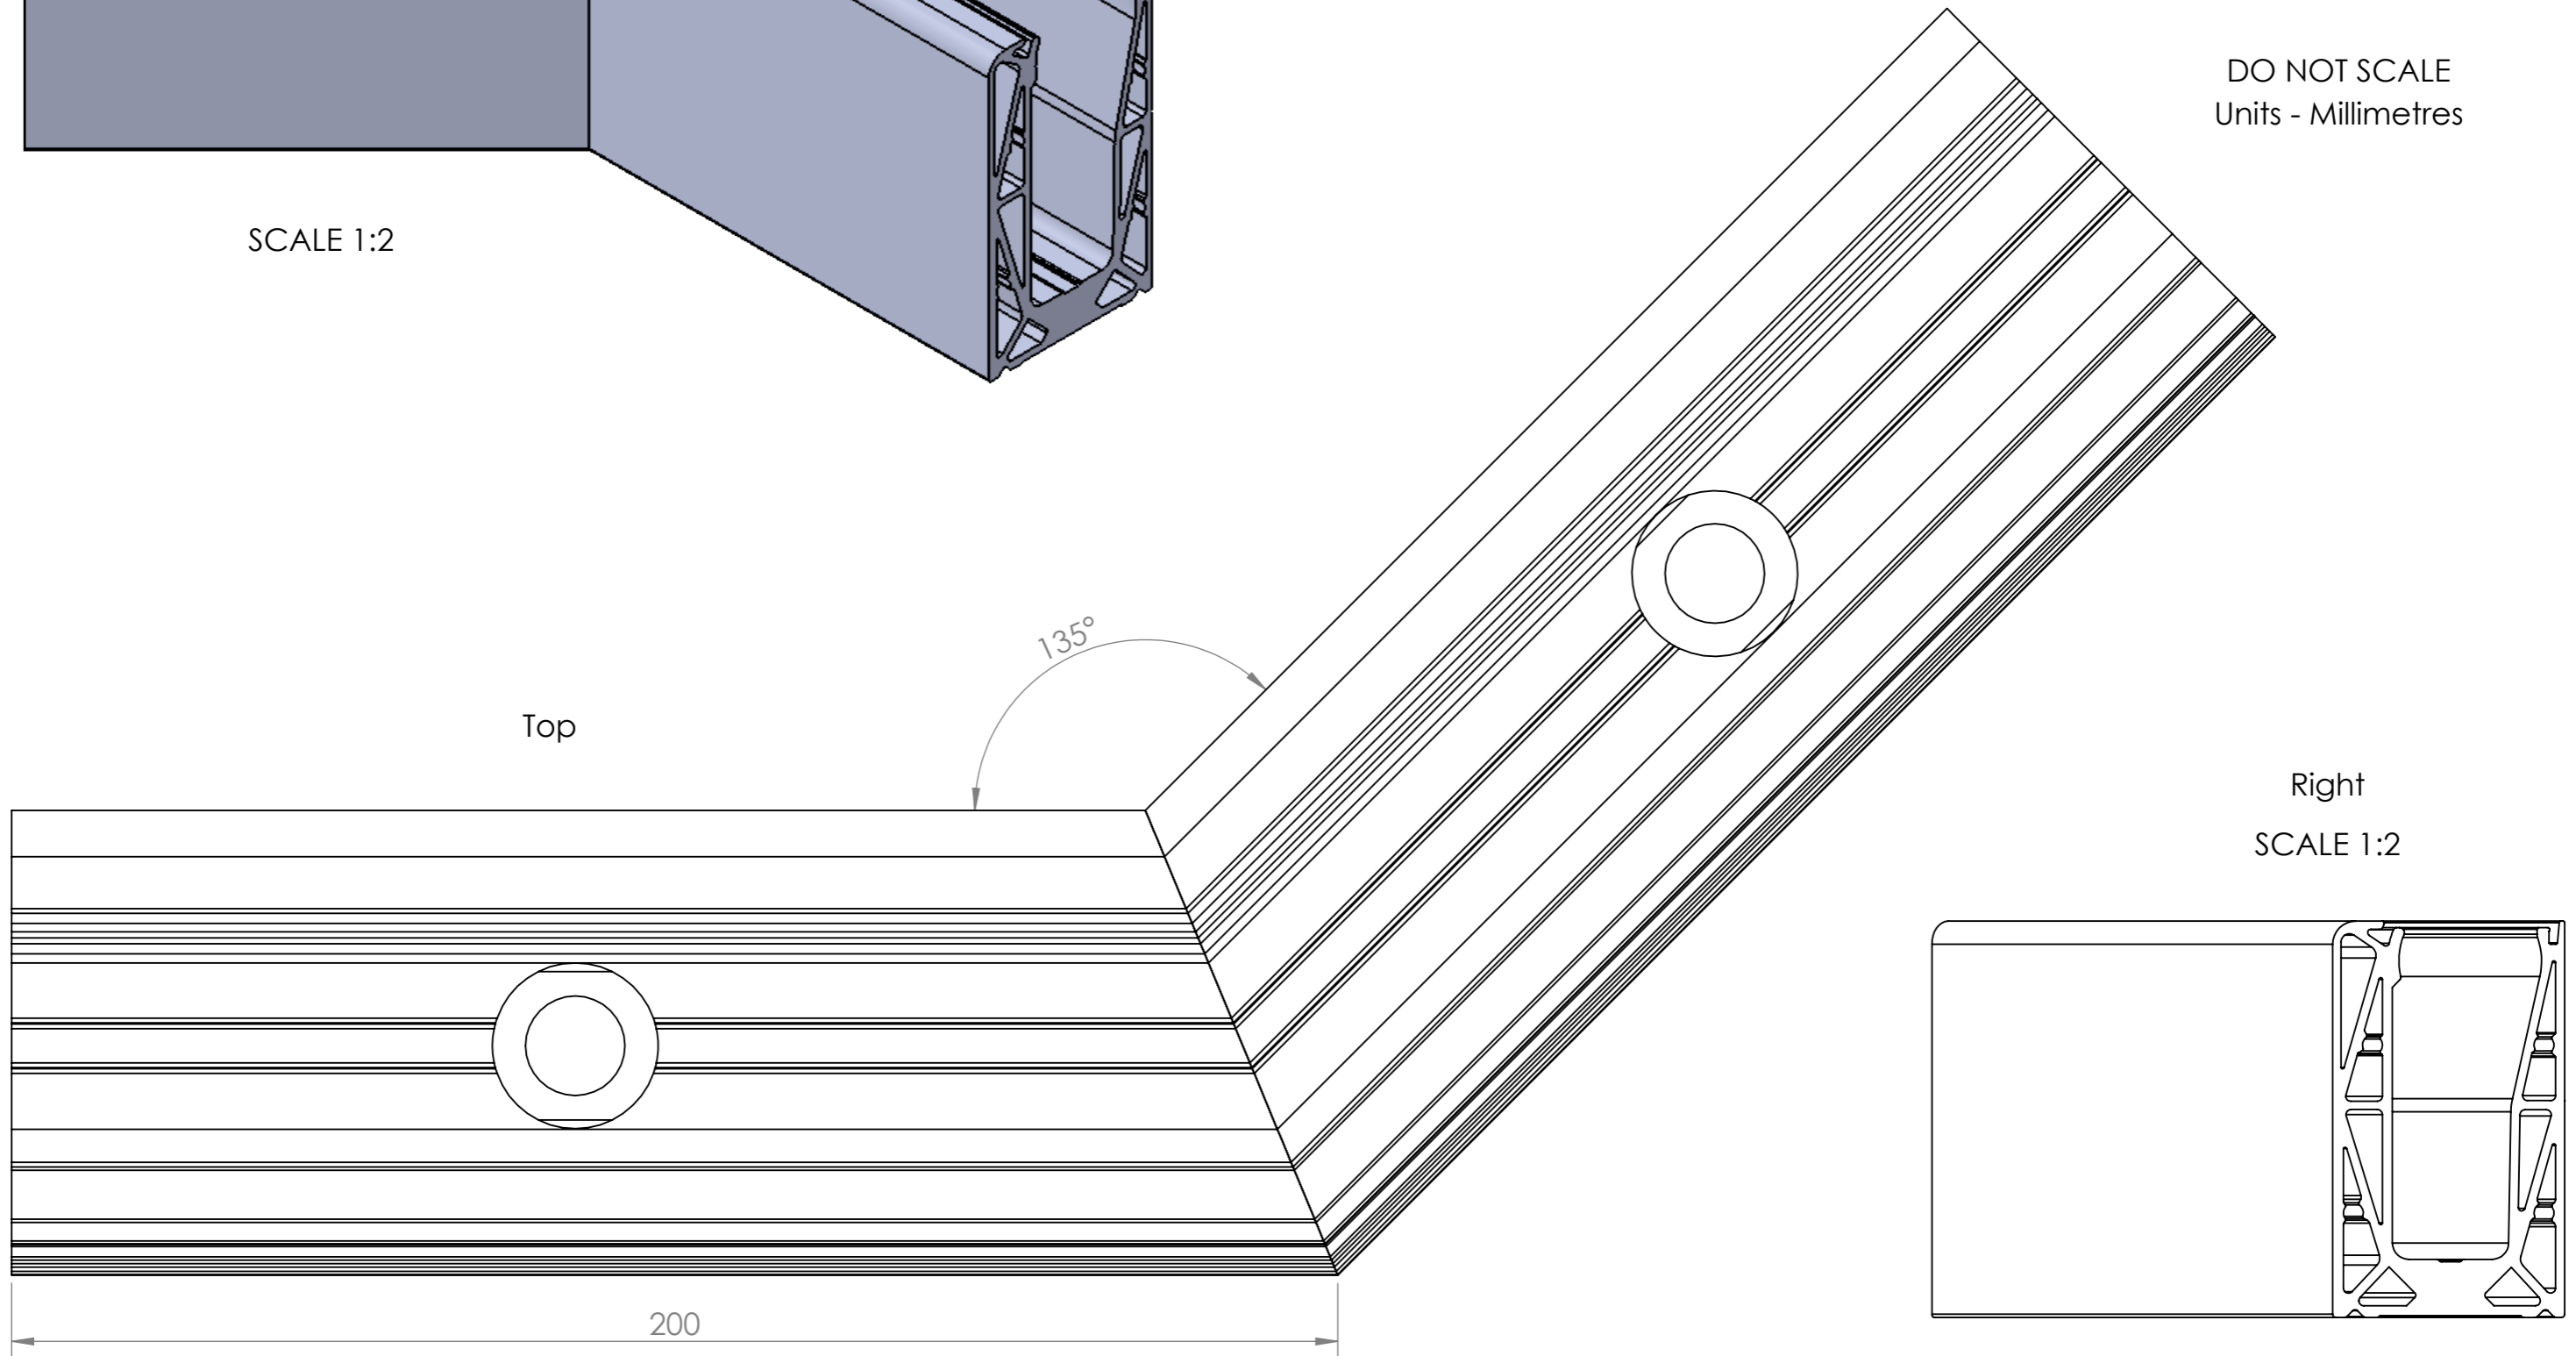

Top


135°

Right
SCALE 1:2


200

R-Lock Side Mount
135° External Corner Section

DO NOT SCALE
Units - Millimetres

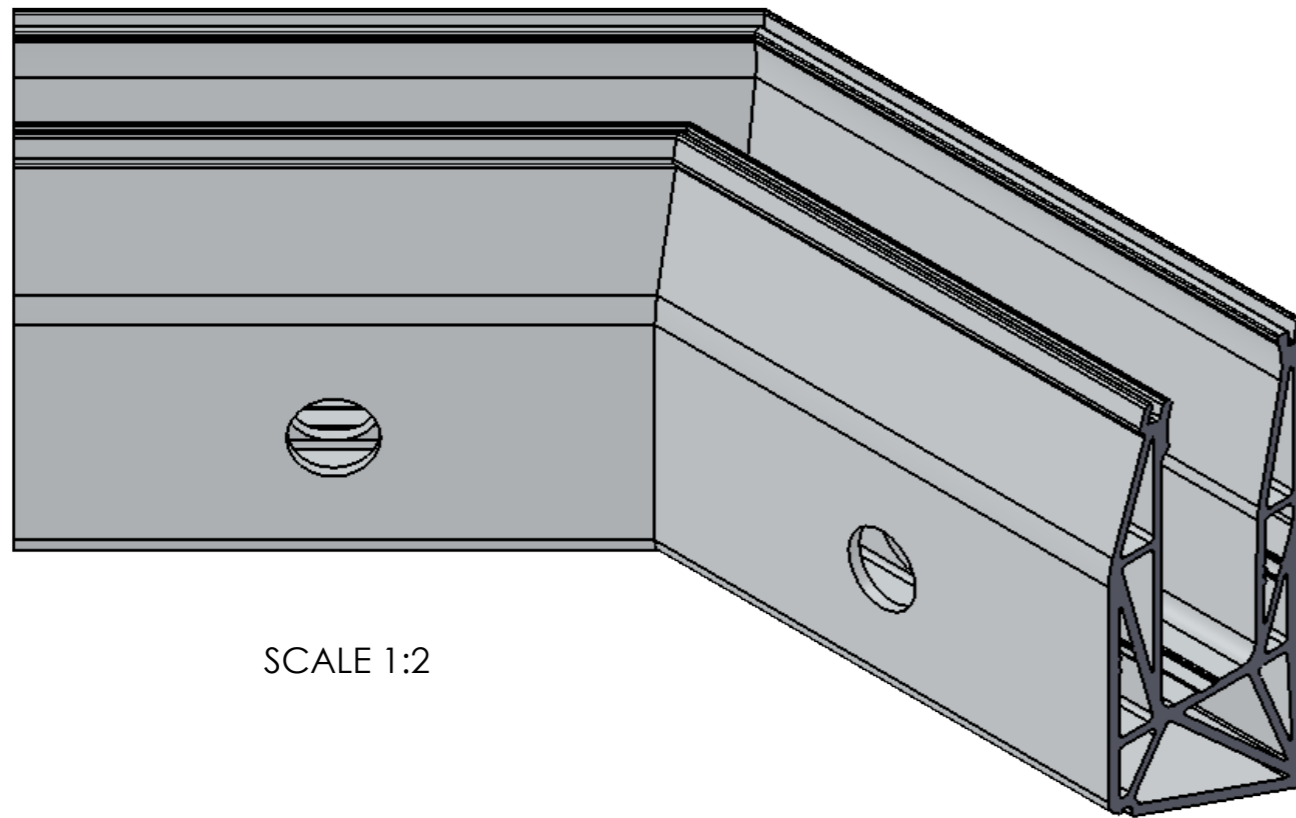

SCALE 1:2

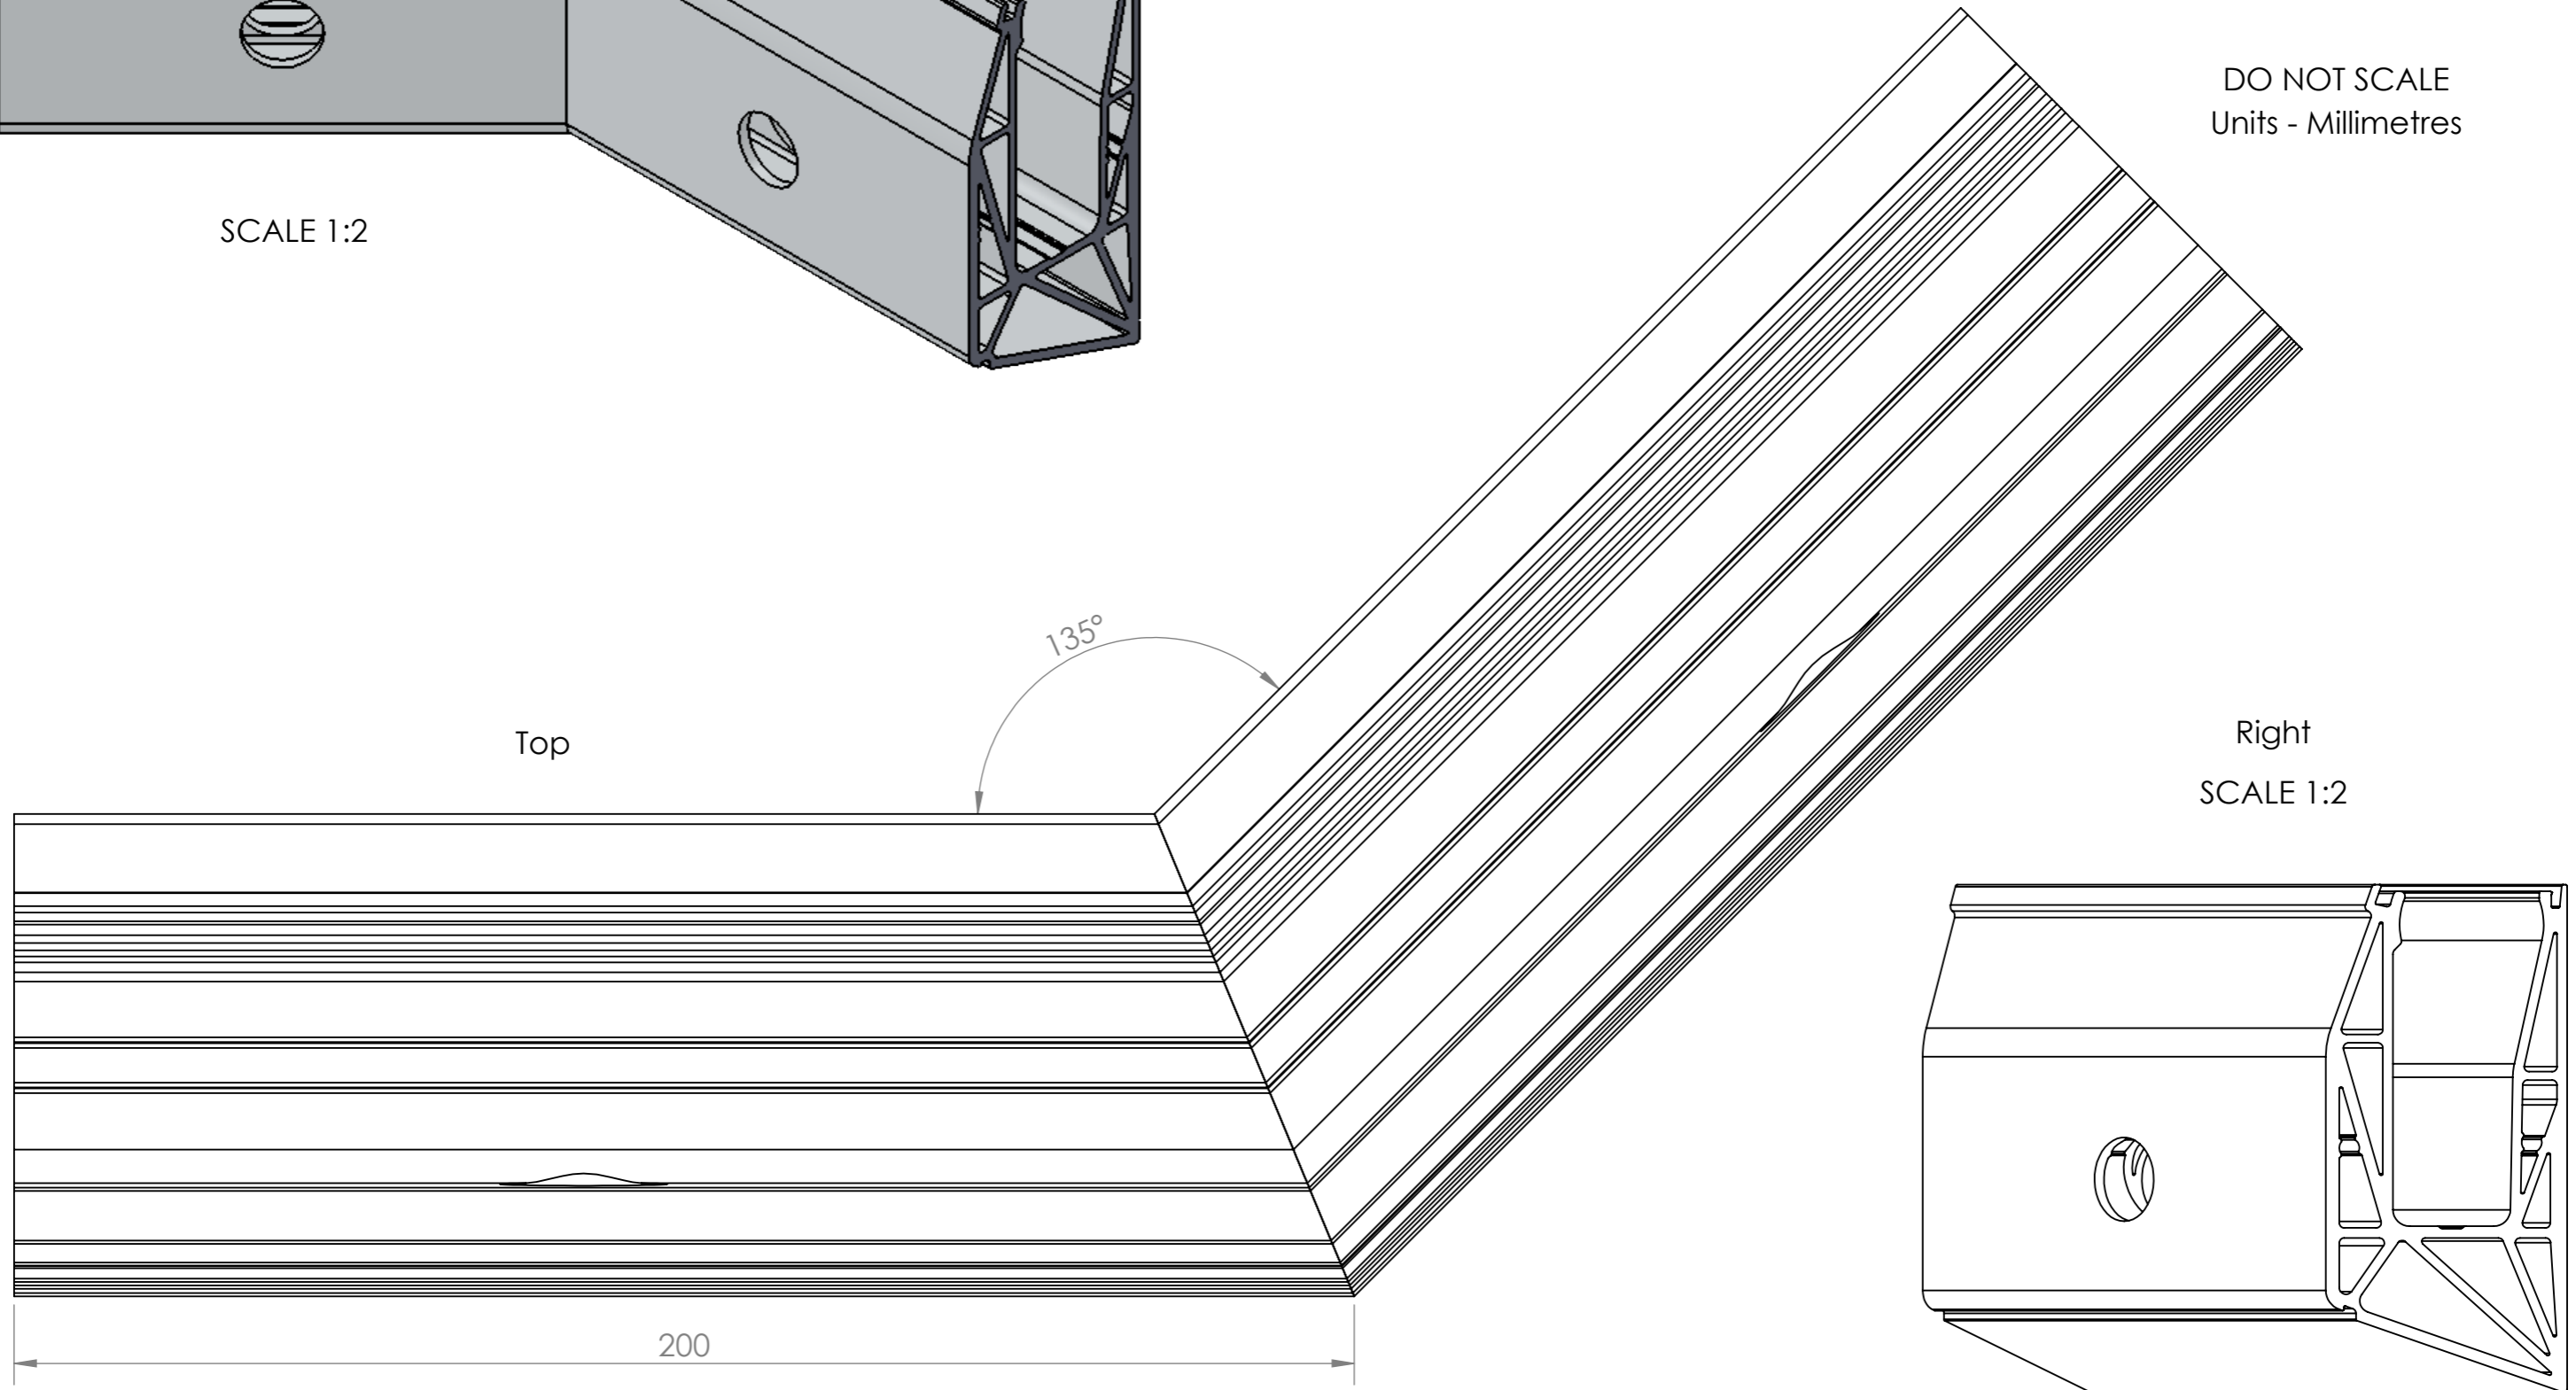

Top

135°

Right
SCALE 1:2


200



T. +44 (0)1208 261040
E. sales@pure-vista.com


R-Lock L Mount
90° External Corner Section

DO NOT SCALE
Units - Millimetres

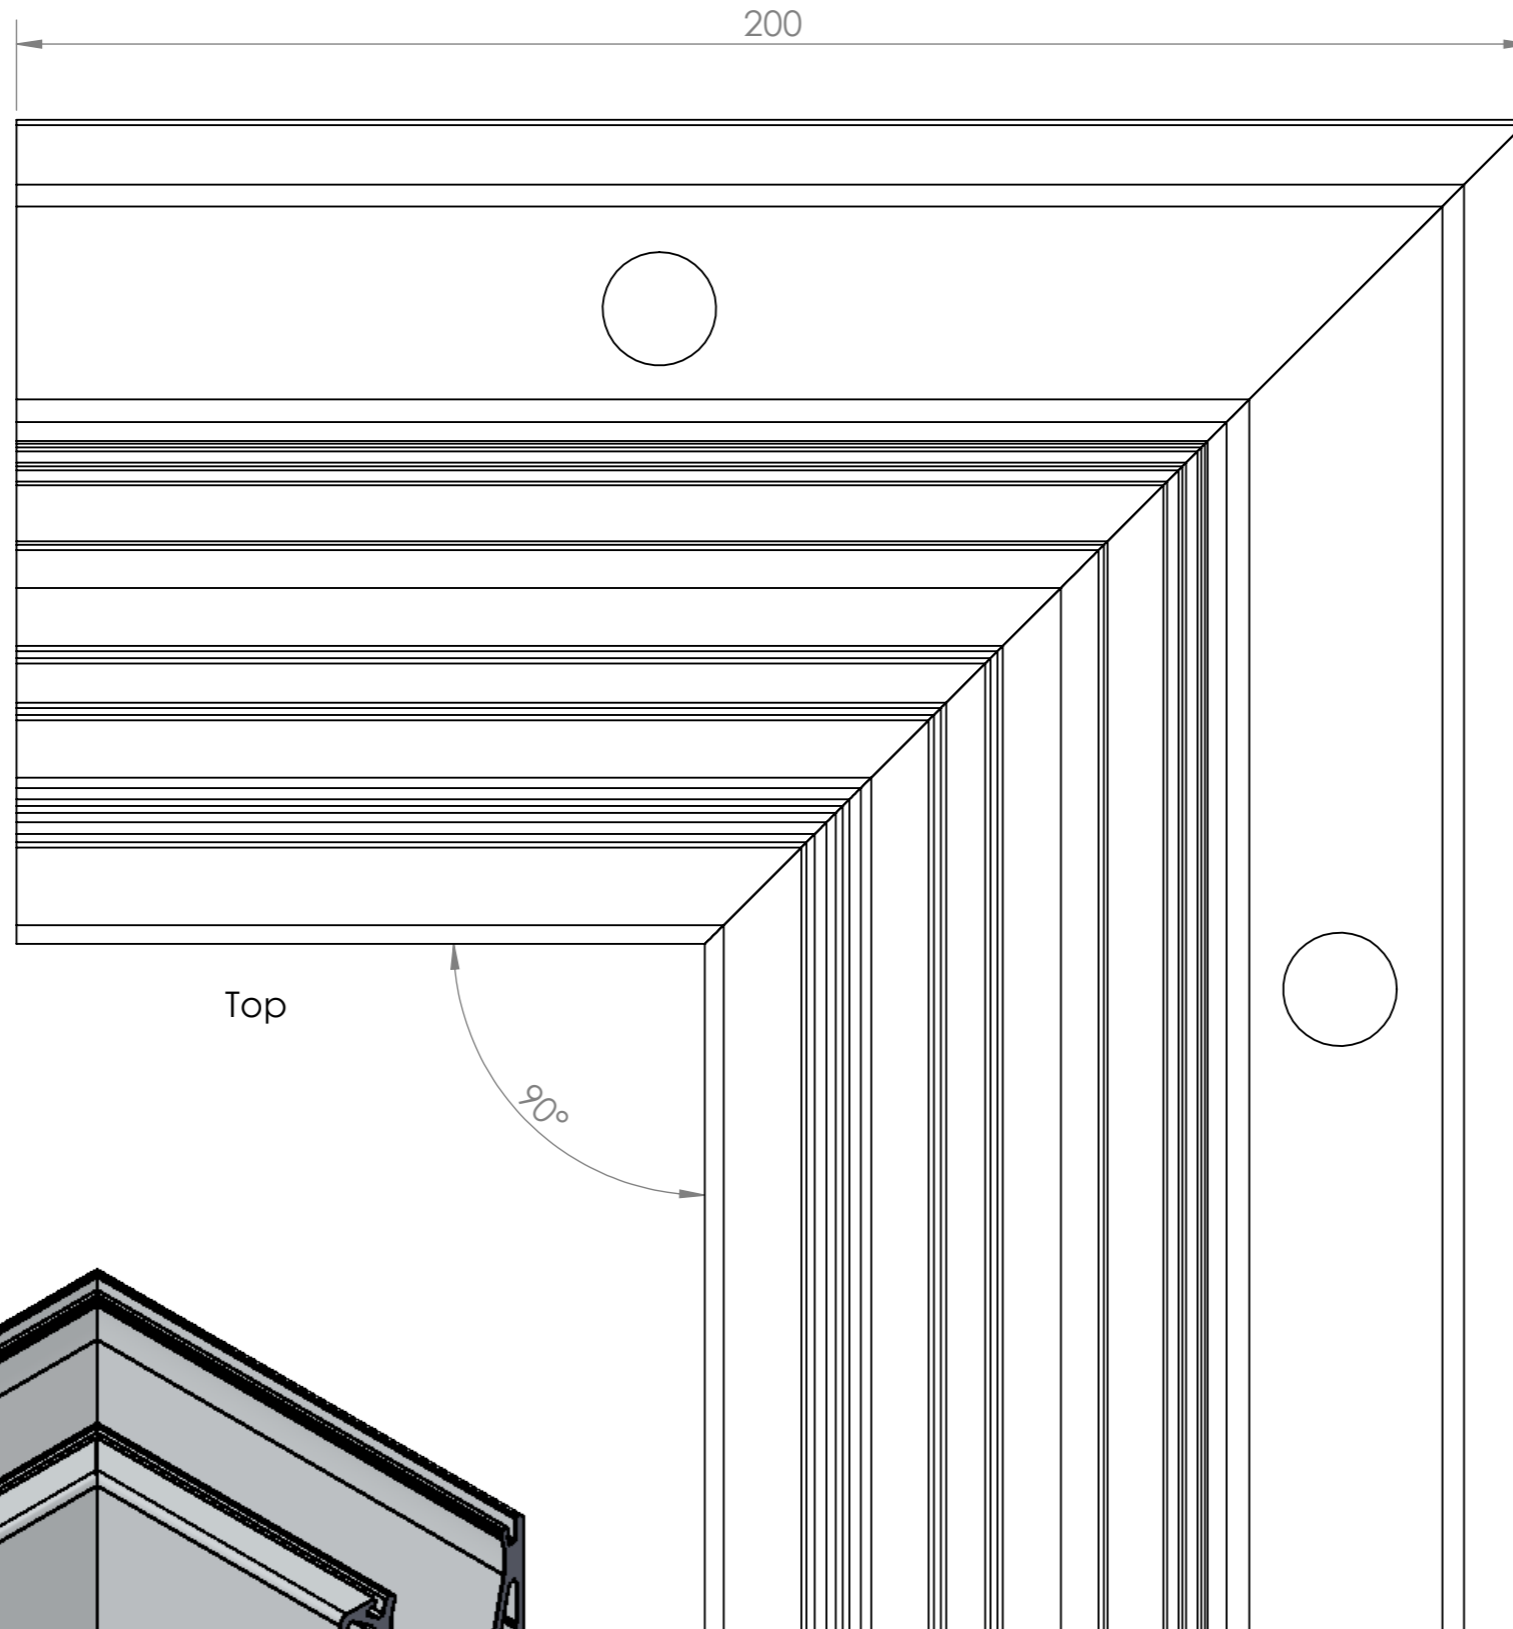


Top

90°

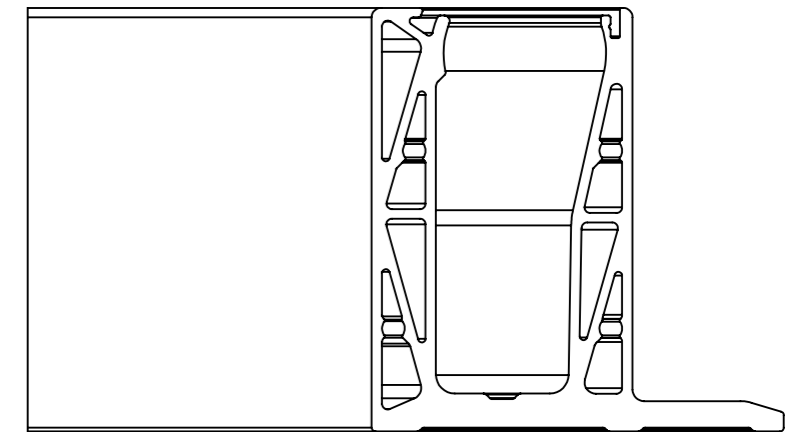

Right




SCALE 1:2

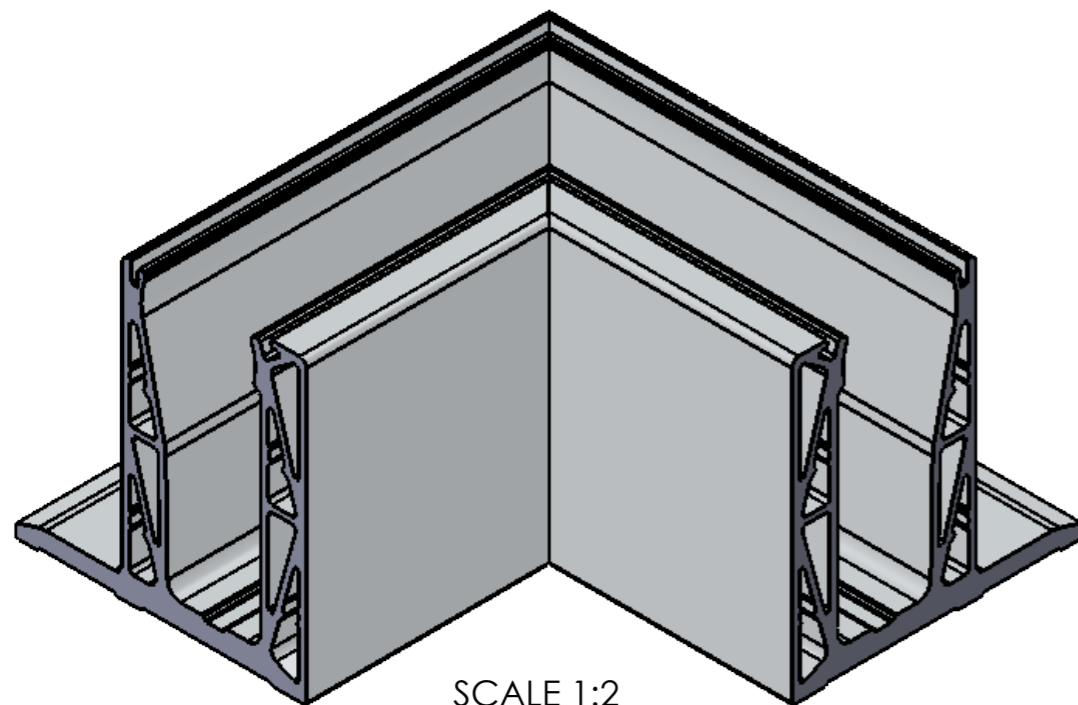

SCALE 1:2


R-Lock L Mount
90° Internal Corner Section

DO NOT SCALE
Units - Millimetres

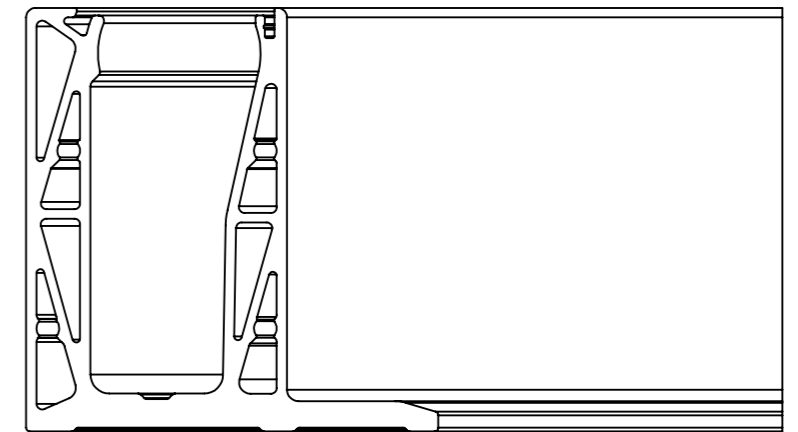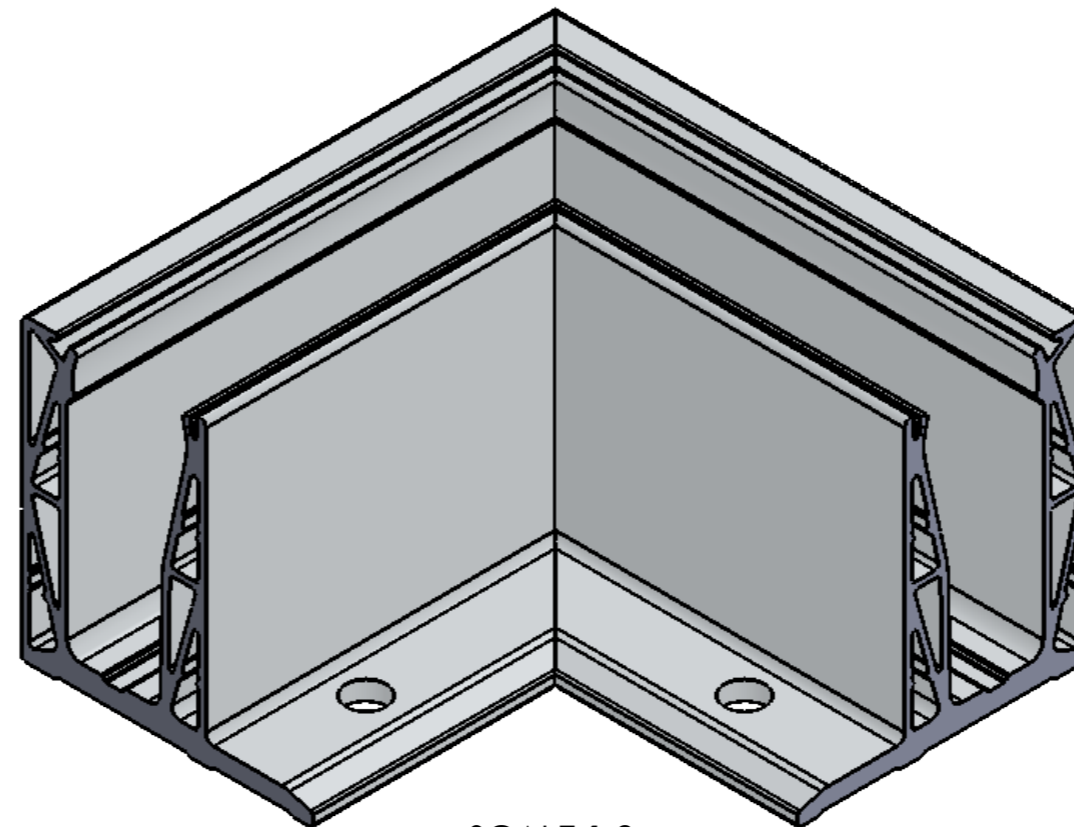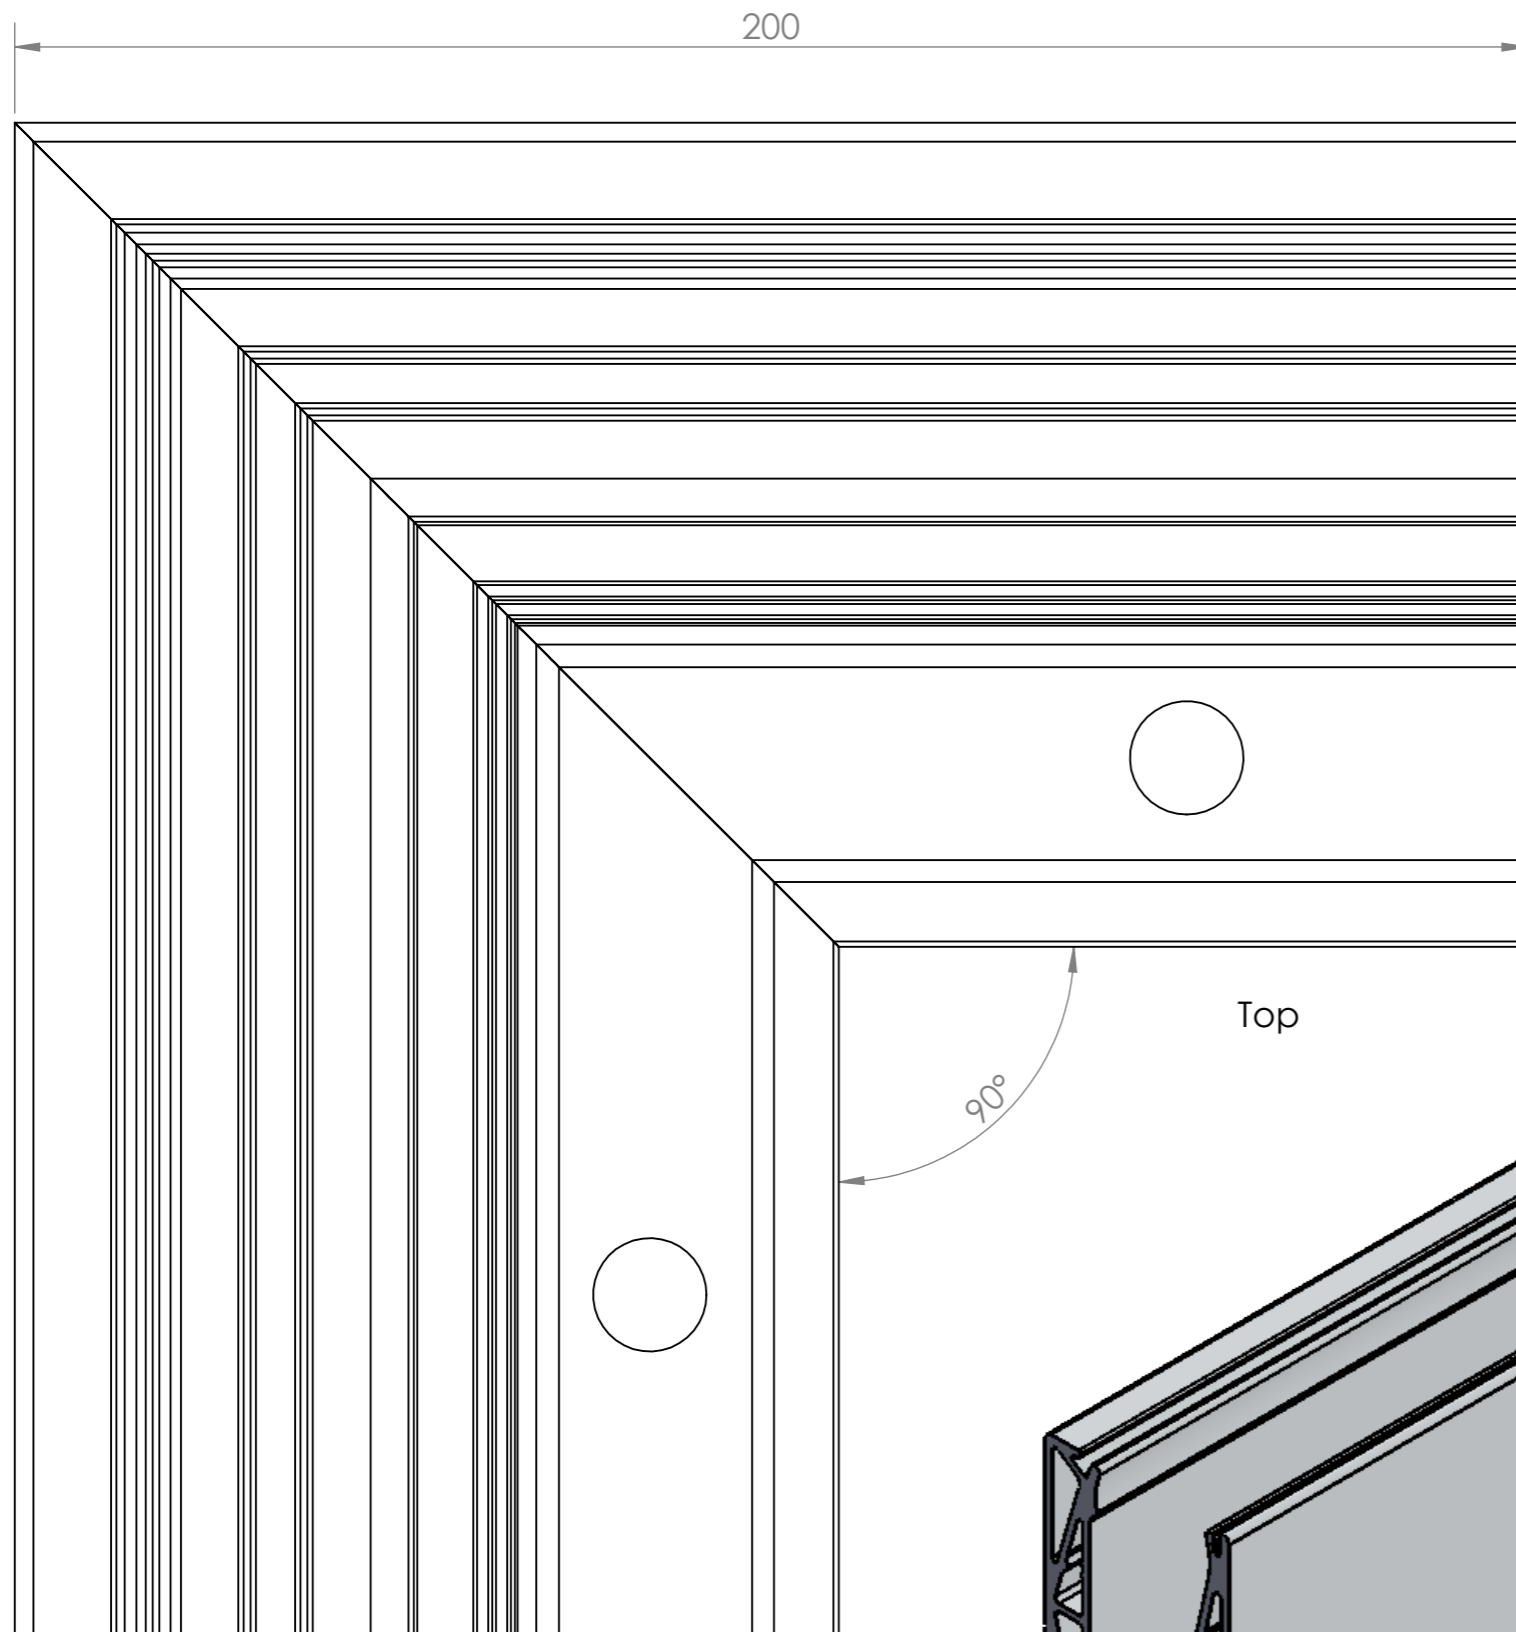


R-Lock L Mount
135° External Corner Section

DO NOT SCALE
Units - Millimetres

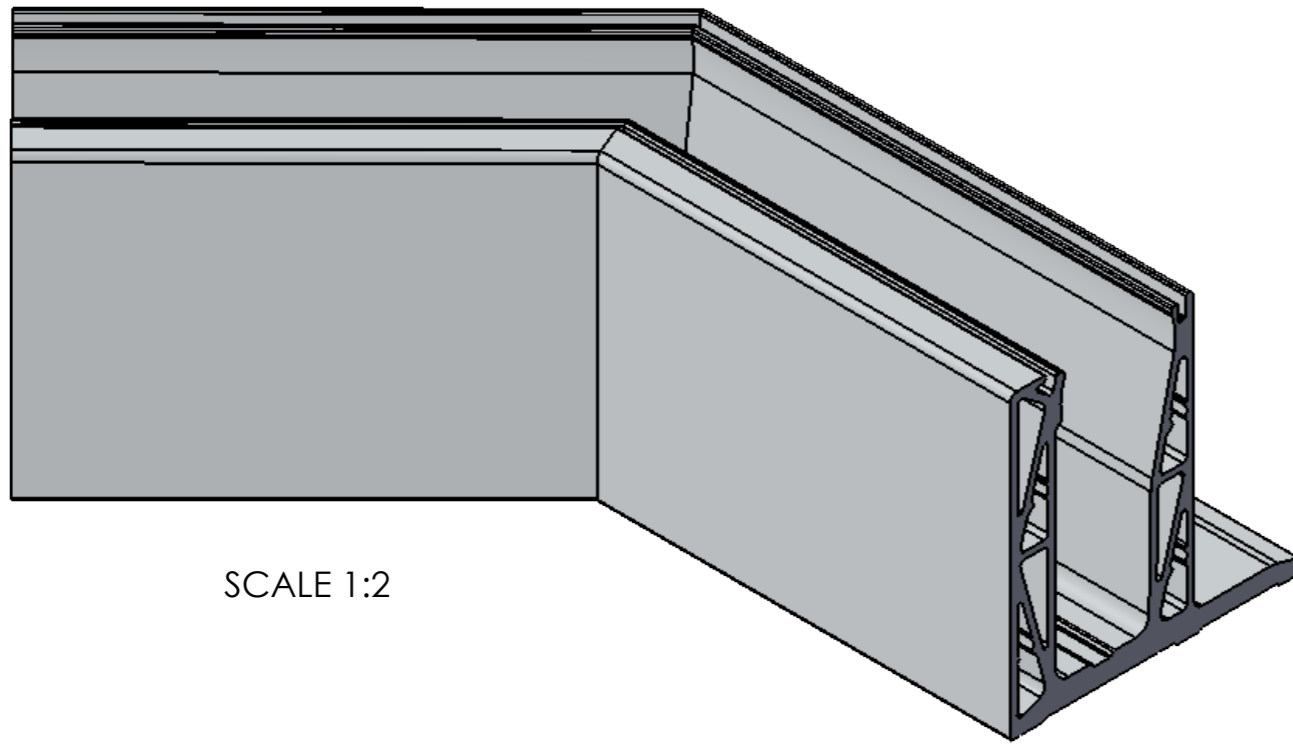

SCALE 1:2

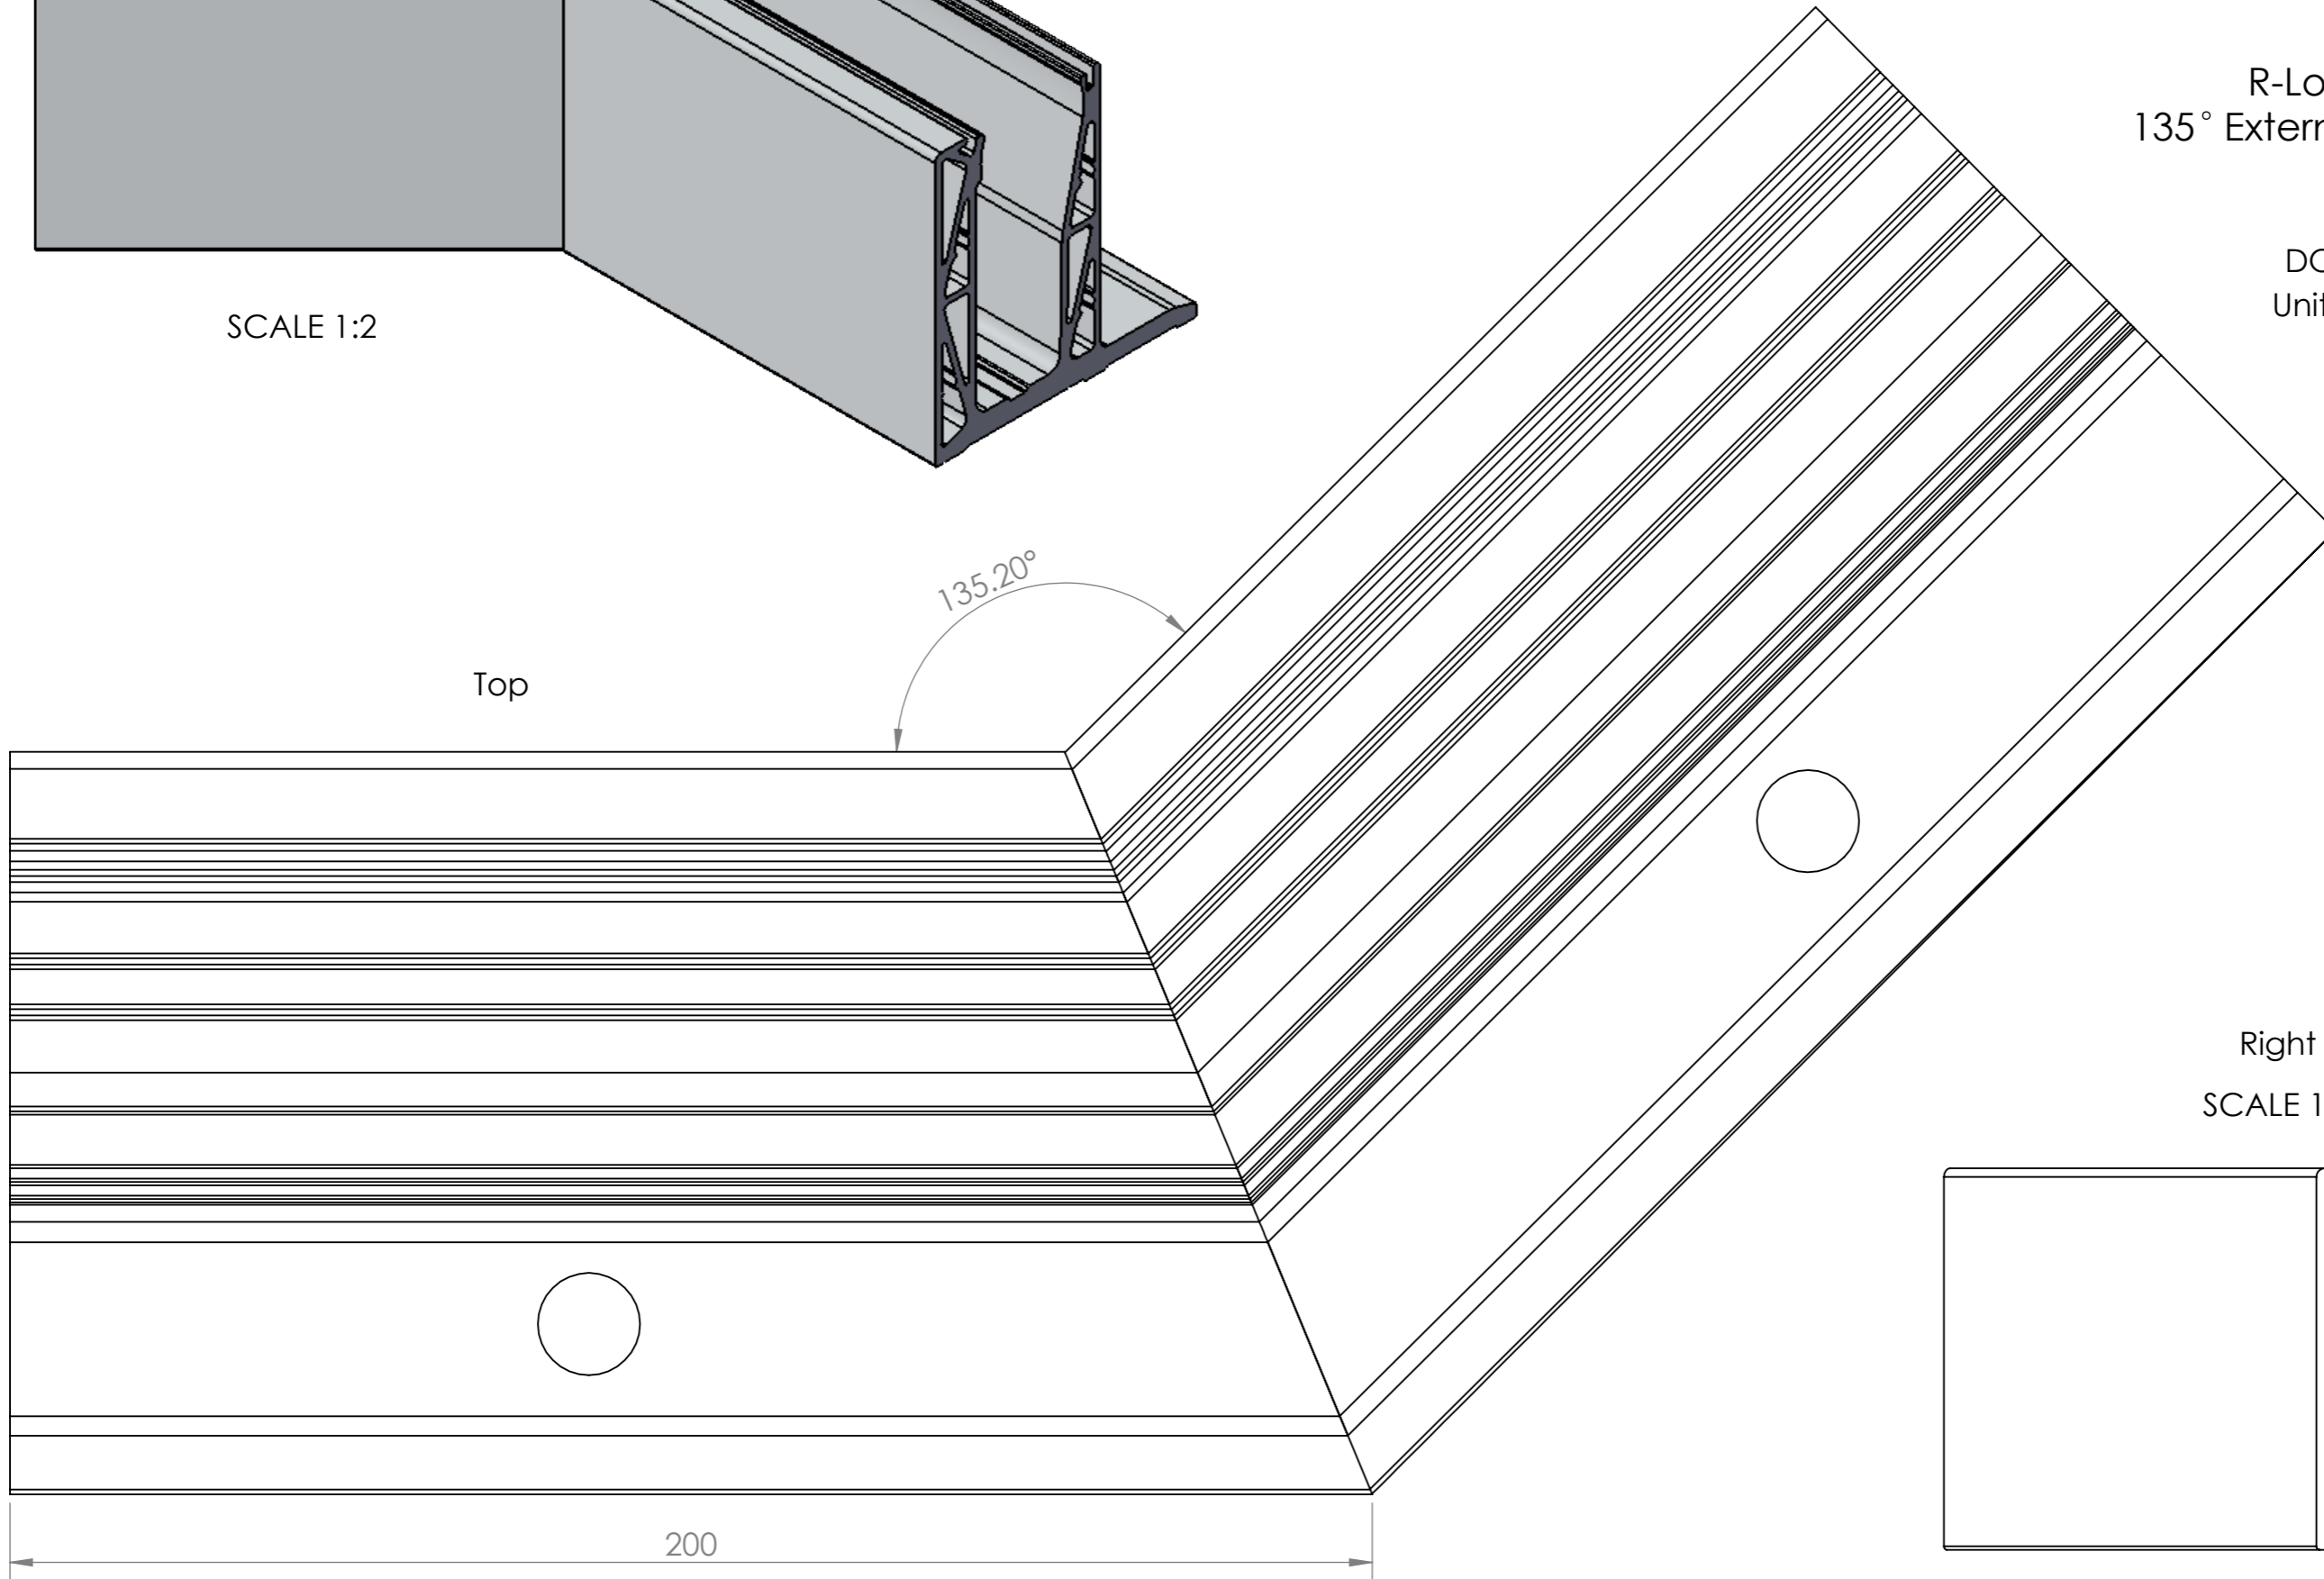


Top

135.20°

200


Right
SCALE 1:2

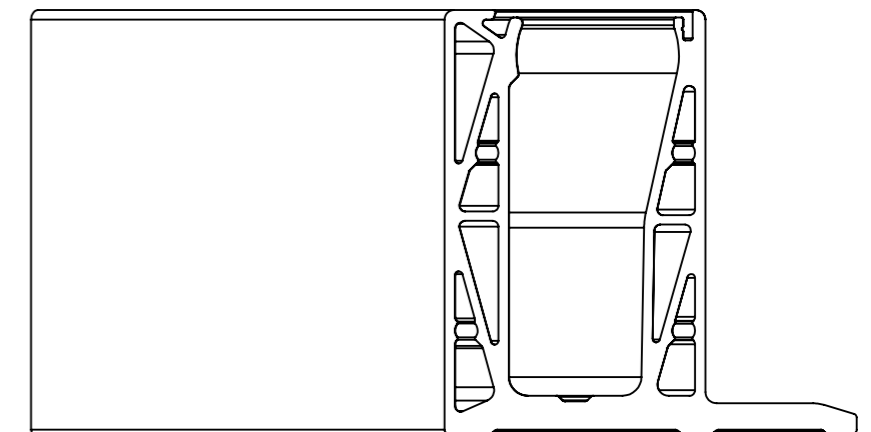

R-Lock L Mount
135° Internal Corner Section

DO NOT SCALE
Units - Millimetres

SCALE 1:2

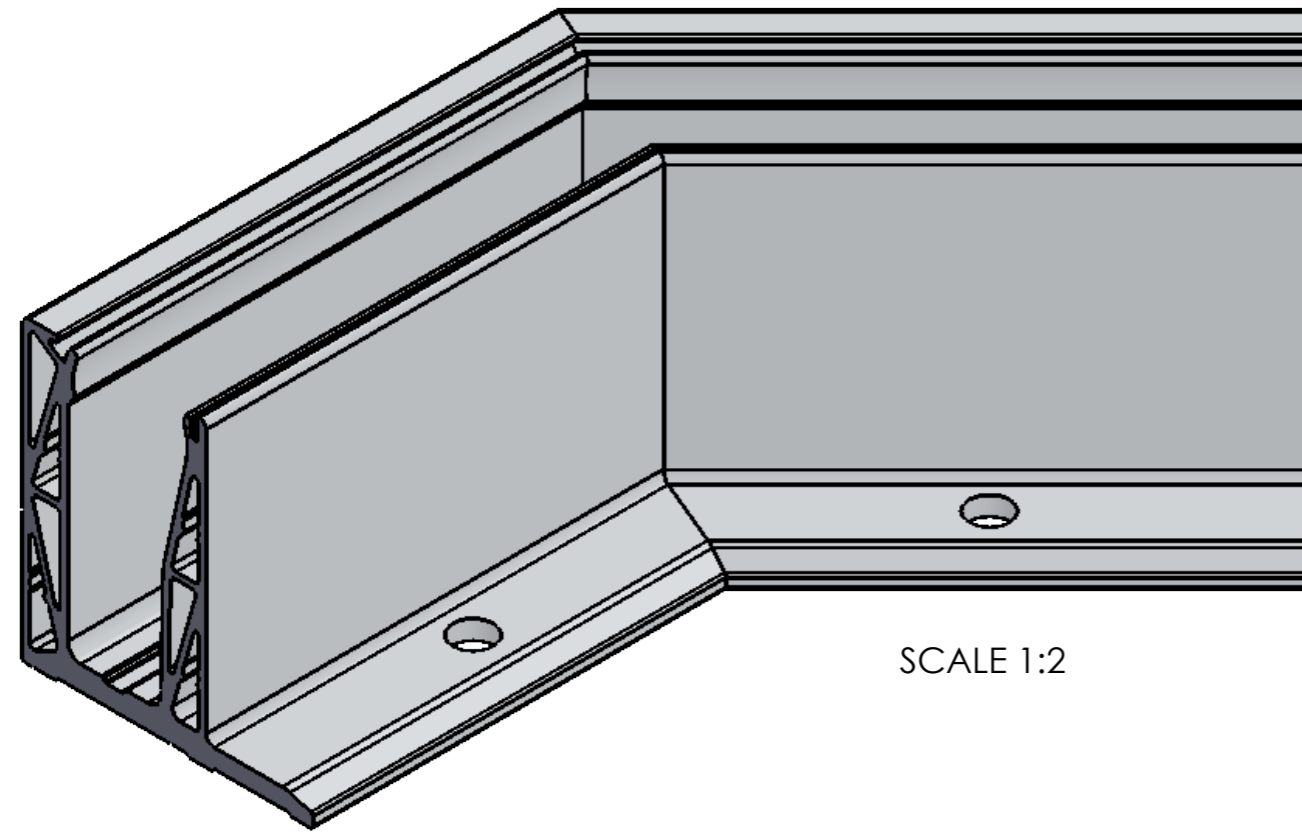

Top

135°

200

Right
SCALE 1:2

