


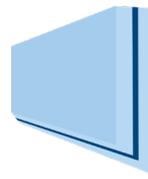

**POSI**glaze



**BALCONY  
SEAL**

## **INSTALLATION GUIDE**

### **Safety**

Latex/nitrile gloves  
Eye protection goggles

### **Tools**

Drill / suitable drill bits  
Spirit level/straight edge  
Tape measure  
Skeleton gun  
Pocket Knife (cut a few mm off end of sika flex delivery tube nozzle)  
Channel product fitting instruction

**Should any problems arise or you have any questions please don't  
hesitate to contact us:**

**T: +44 (0)1208 261 040**


**F: +44 (0)1208 261 041**

**E: [sales@pure-vista.com](mailto:sales@pure-vista.com)**

**[www.pure-vista.com](http://www.pure-vista.com)**




POSIglaze

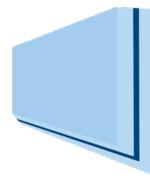

BALCONY  
SEAL

## INSTALLATION GUIDE

1.

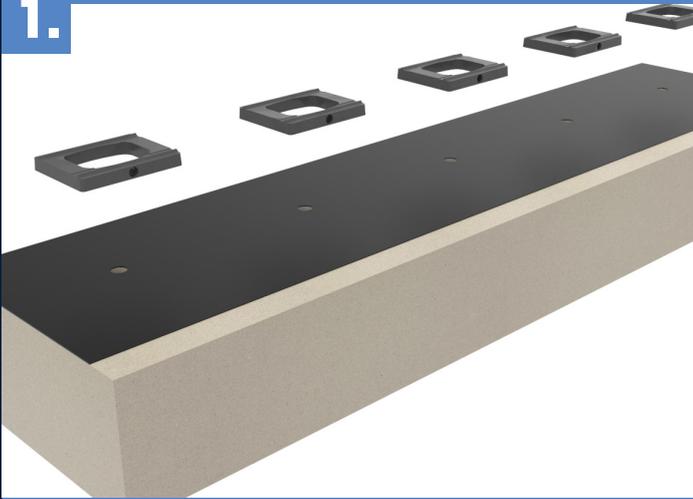

### POSITION THE DRAINBLOCKS

Apply the waterproof membrane to your surface. Once this is complete use the PO-SIglaze channel and a pen to mark the drill hole positions. Drill the bolt holes into the substrate starting at 100mm from the first edge and then at 200mm intervals thereafter. Position each drain block over the drilled hole. Make sure that the filling port is facing you on the inside of the installation.

2.



### ALIGN THE CHANNEL

Next, you must place the channel on top of the drain blocks. Make sure the grooves area aligned and the channel is sitting correctly on each drain block.

3.



### FIT THE BOLTS

Once the channel is lined up with the holes and is also level you can fix down the channel with the bolts.

**Before moving onto the next step you must ensure the ground is completely dry.**



## INSTALLATION GUIDE

4.



### RESIN

One at a time, pump resin into the drain blocks. For ease, trim 12-15mm off the nozzle before pumping. When you see resin fill the bolt hole, stop. Use a gloved finger to remove any excess. Continue down the entire length of the channel until all the drain blocks have been filled with resin. The resin will take 24 hours to cure. You are able to fit the glass before the curing time is finished.


5.



### FIT THE GLASS

Complete the installation of the glass as normal. Adjust the glass so that it is perfectly aligned. Once this is complete you should fit the top bead and gasket as well as the end caps if they're required.

6.

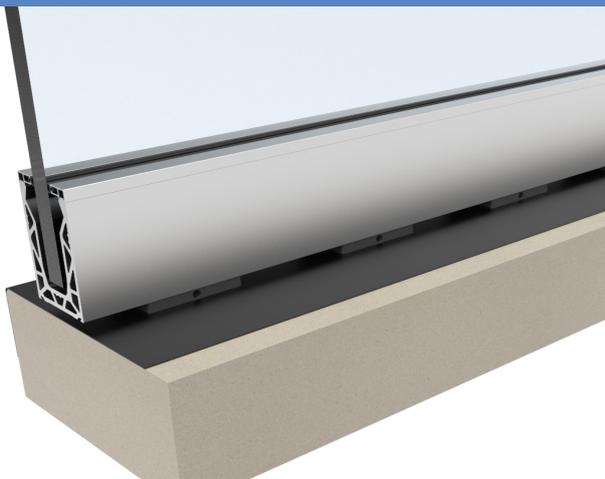

### FINISH THE INSTALLATION

Once everything is correctly in place we recommend that the glass and channel are cleaned. Using a non-abrasive glass cleaner on the glass and warm soapy water on the POSIglaze channel. Please only use a soft sponge or cloth to avoid any scratches.

Should any problems arise or you have any questions please don't hesitate to contact us:

T: +44 (0)1208 261 040

F: +44 (0)1208 261 041

E: sales@pure-vista.com

www.pure-vista.com