POSI-Lite

BALCONYseal®

INSTALLATION GUIDE

Safety

Latex/nitrile gloves
Eye protection goggles

Tools

Drill / suitable drill bits
Spirit level/straight edge
Tape measure
Skeleton gun
Pocket Knife (cut a few mm off end of sika flex delivery tube nozzle)
Channel product fitting instruction

Should any problems arise or you have any questions please don't hesitate to contact us:

T: +44 (0)1208 261 040
E: sales@pure-vista.com
www.pure-vista.com

POSI-Lite BALCONYseal
INSTALLATION GUIDE

1.

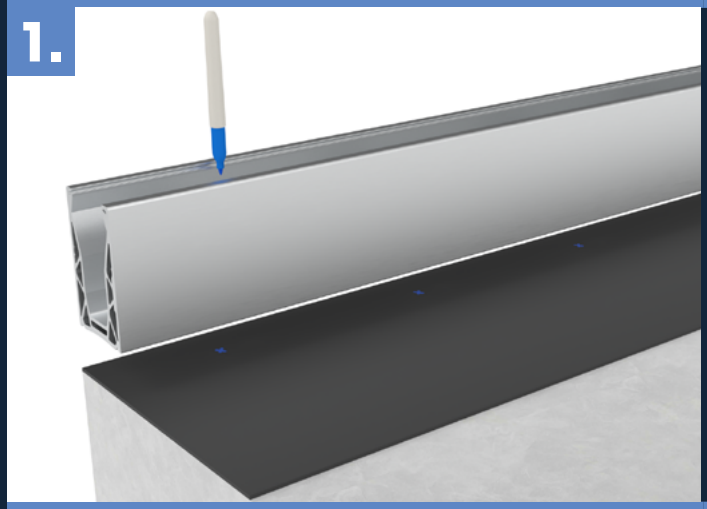

MARK DRILL HOLES

Apply the waterproof membrane to your surface. Once this is complete, use the POSI-Lite channel and a pen to mark the drill hole positions.

Drill the bolt holes into the substrate starting at 100mm from the first edge and then at 200mm intervals thereafter.

2.

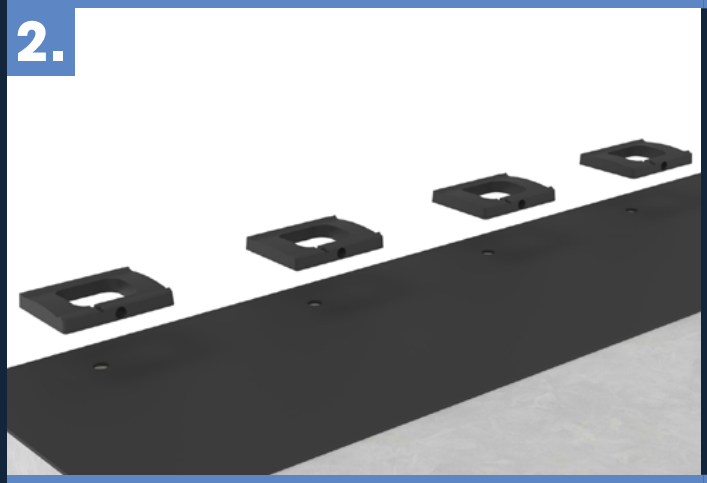

POSITION THE DRAINBLOCKS

Position each drain block over the drilled hole. Make sure that the filling port is facing you on the inside of the installation.

3.

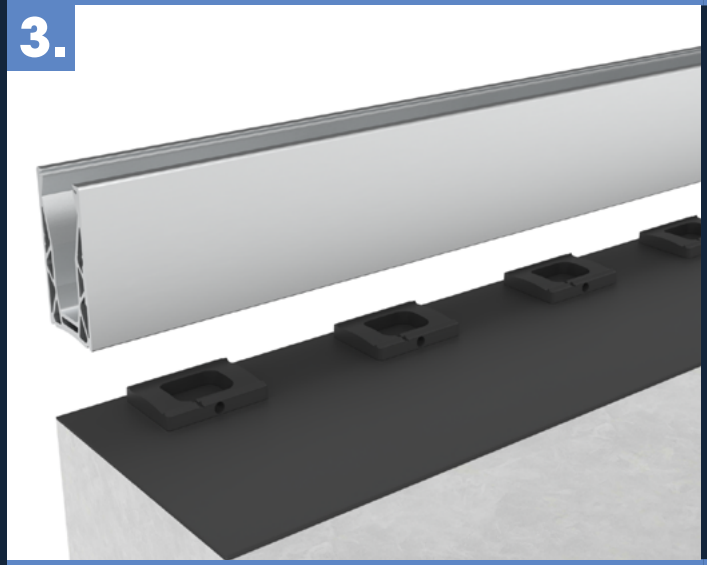

ALIGN THE CHANNEL

Next, place the channel on top of the drain blocks. Make sure the grooves are aligned and the channel is sitting correctly on each drain block.

4.

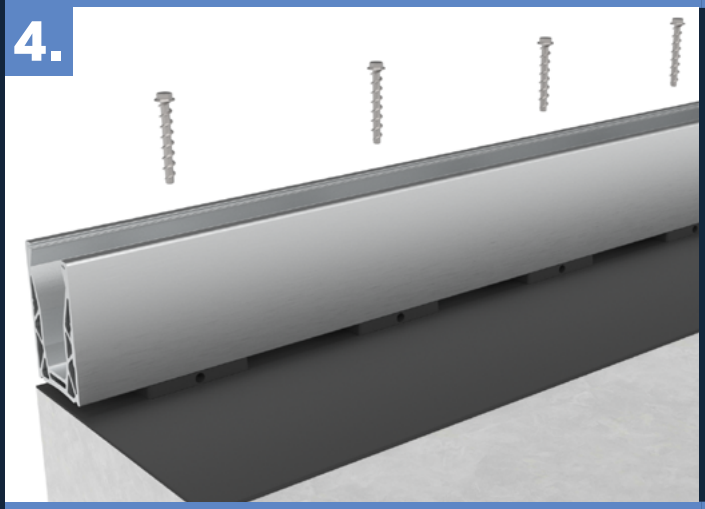

FIT THE BOLTS

Once the channel is lined up with the holes and is also level, you can fix down the channel with the bolts.

Before moving onto the next step you must ensure the gound is completely dry.

5.

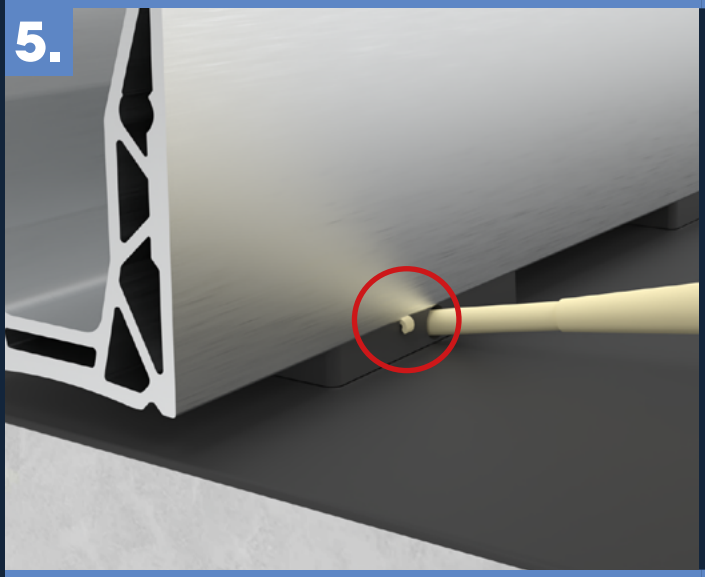

SEALANT

One at a time, pump sealant into the drain blocks. For ease, trim 12-15mm off the nozzle before pumping. Continue to fill until sealant exits the vent channel.
Leave excess sealant to cure before cleaning to avoid spreading the sealant. Continue down the entire length of the channel until all the drain blocks have been filled with sealant. The sealant will take 24 hours to cure. You are able to fit the glass before the curing time is finished.

6.

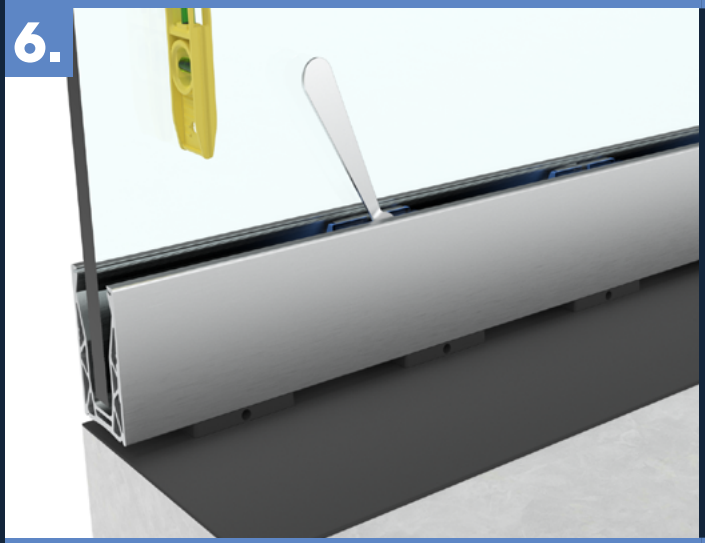

FIT THE GLASS

Complete the installation of the glass as normal. Adjust the glass so that it is perfectly aligned. Once this is complete, fit the gasket and end caps (if required).

7.

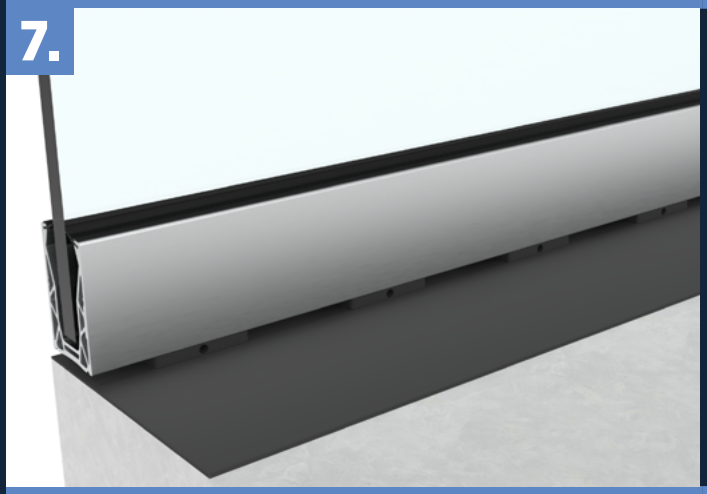

FINISH THE INSTALLATION

Now the sealant has hardened, trim away the excess sealant.

Once everything is correctly in place we recommend that the glass and channel are cleaned. Using a non-abrassive glass cleaner on the glass and warm soapy water on the POSI-Lite channel. Please only use a soft sponge or cloth to avoid any scratches.

Should any problems arise or you have any questions please don't hesitate to contact us:
T: +44 (0)1208 261 040
E:- sales@pure-vista.com
www.pure-vista.com