ARIA

INSTALLATION GUIDE

Safety

Eye protection goggles
Use 2 people for this balustrade installation

Tools

Drill & suitable drill bits
Spirit level
Tape measure
Rubber Mallet
Channel product fitting instructions

Should any problems arise or you have any questions please don't hesitate to contact the Pure Vista technical team:
T: +44 (0)1208 261 040
E: sales@pure-vista.com
www.pure-vista.com

ARIA
INSTALLATION GUIDE

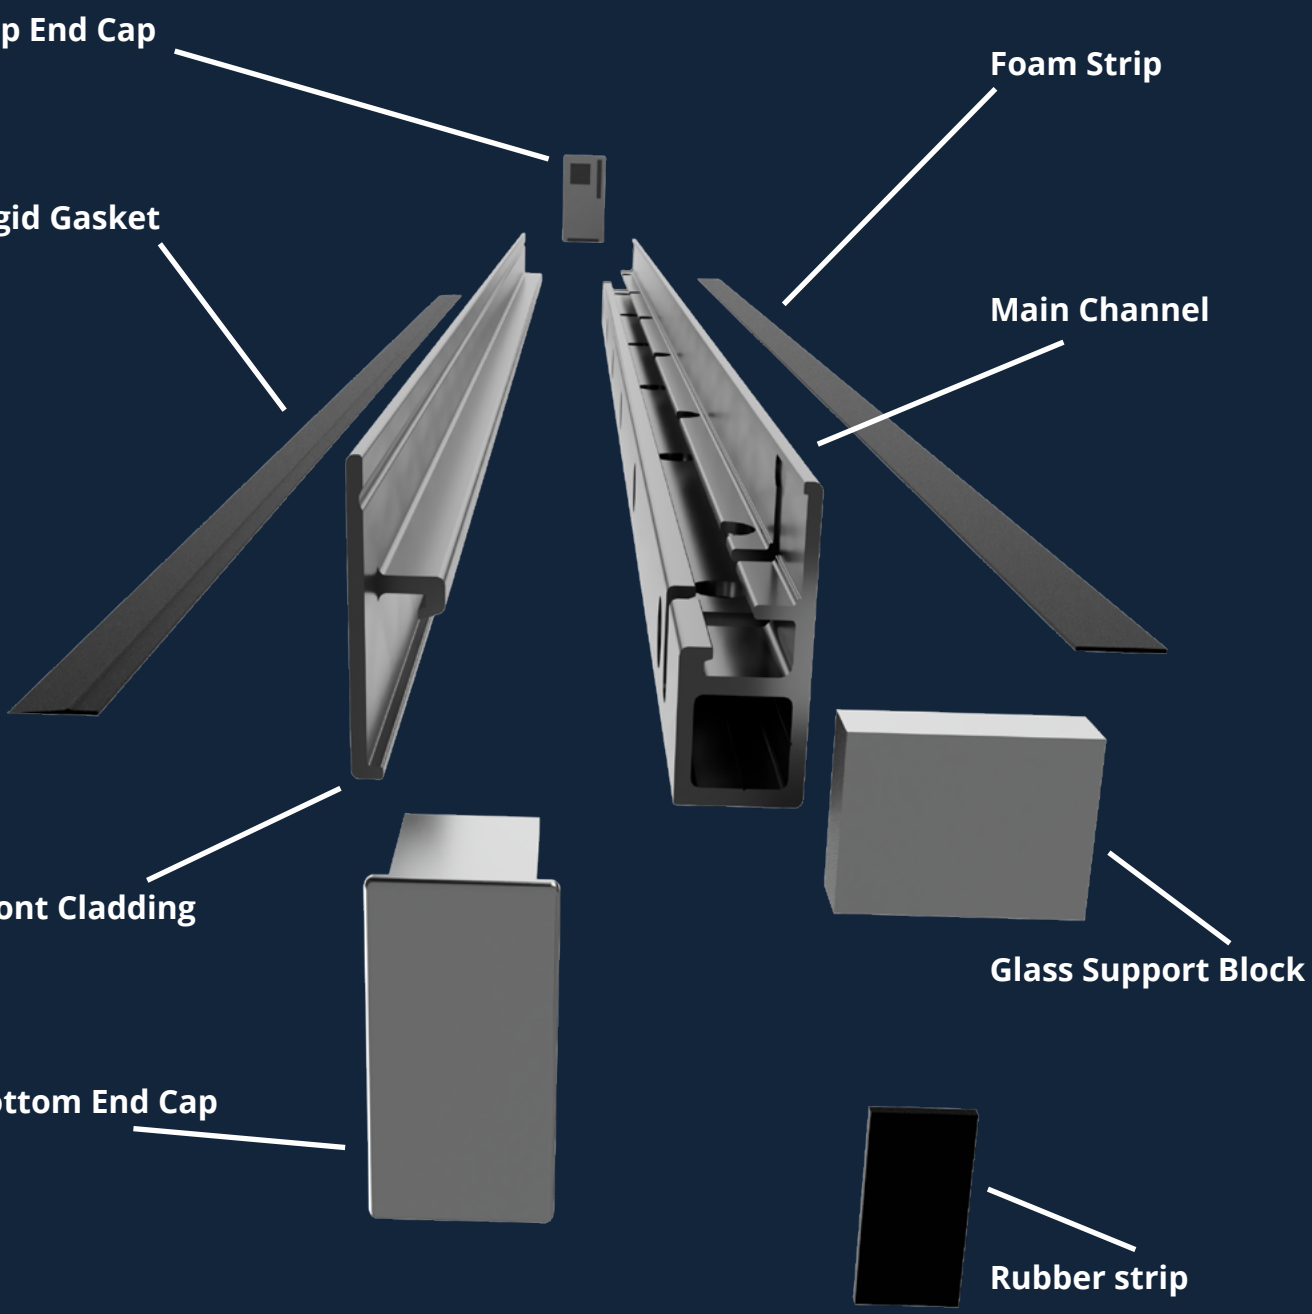

ARIA
INSTALLATION GUIDE

1.

Repeat each of these steps on both sides of the installation before moving onto the next.

ARIA can be installed face fix or reveal fixed. The installer must finish off drilling the channel to suit the installation.

Use the channel to mark the drill holes, remove any debris before then fixing the channel to the substrate using M8 cap head fixing.

2.

Stick the rubber strip to the support block as shown, before sliding the support block into position. Ensure the support block is sat correctly. The glass will rest on these blocks.

3.

Remove the double sided tape paper from the foam strip and stick into the channel. This should be positioned directly above the support block for the entire length of the channel.

ARIA
INSTALLATION GUIDE

4.

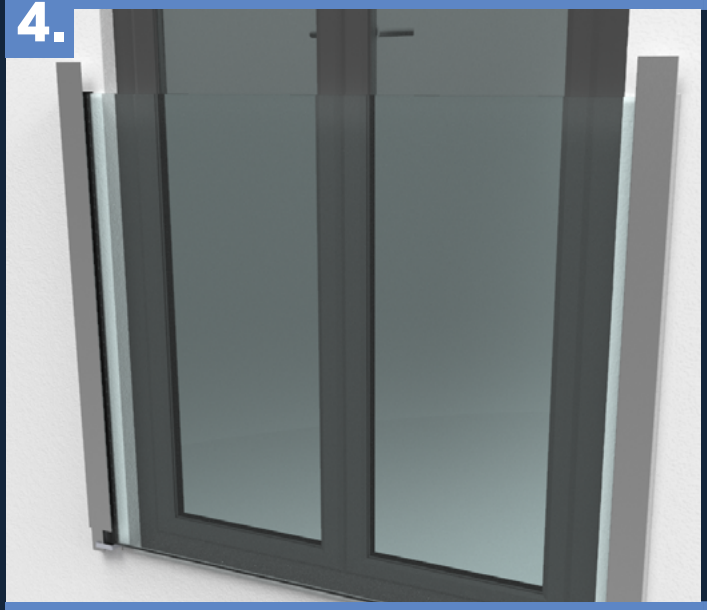

Using two people, move the glass into position so it is resting on top of the support block on both sides. With the cladding raised above the support block, hook it into position and slide down so the 2 elements are aligned.

5.

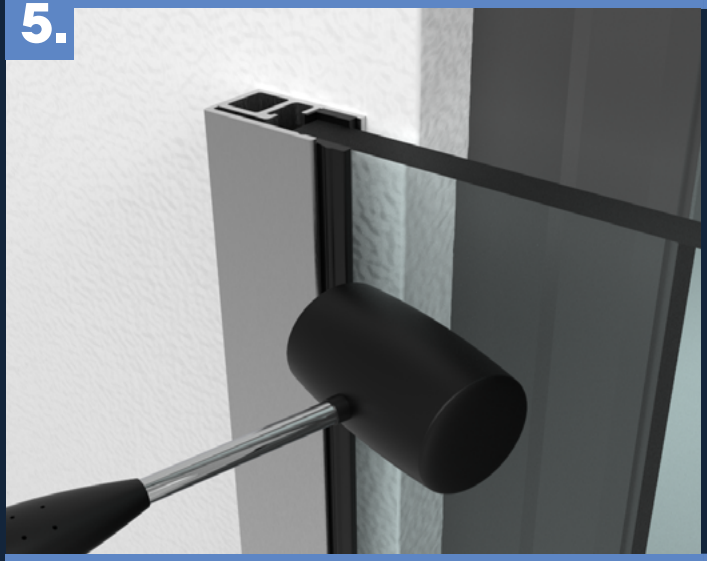

Using a rubber mallet, push the bead into the channel. This will secure the glass in place.

6.

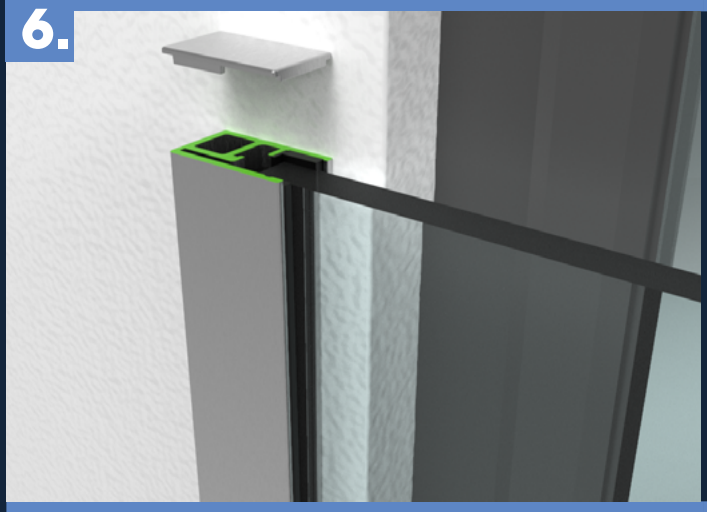

To finish the installation you must knock in and then glue the end caps on. Shown in green, cover the ends with glue and push the end caps into place. Make sure all 4 end caps are used and secure to stop any debris entering the channel.