POSIone Side Fix
INSTALLATION GUIDE

Safety
Gloves for handling glass
Eye protection goggles
Ear protection

Tools
Drill & suitable drill bits
Spirit level
Tape measure
Hole blower (concrete fixings)
Hammer
Socket set 1/2inch
Torque wrench 1/2
Blocks to support glass
Quick grip
POSI Spanner
Glass cleaner and rag

Should any problems arise or you have any questions please don't hesitate to contact us:

T: +44 (0)1208 261 040
E:- sales@pure-vista.com
www.pure-vista.com

POSIone Side Fix
INSTALLATION GUIDE

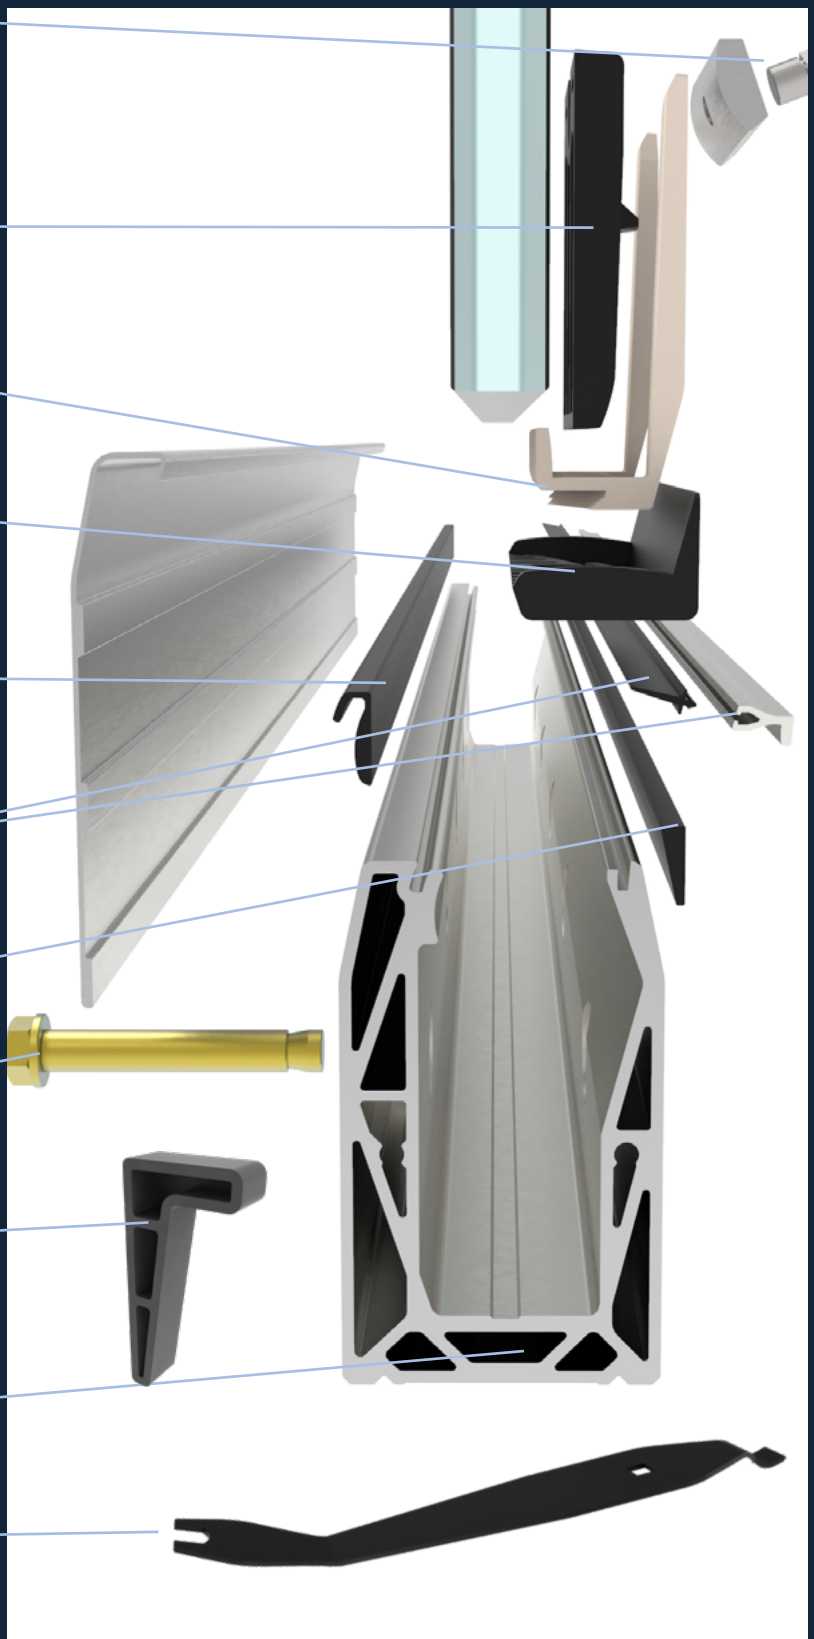

POSIone Side Fix

INSTALLATION GUIDE

1.

Fix the channel to the substrate using M12 bolts. Make sure the channel is fitted with the widest side closest to the outside edge.

2.

Place the wedge spacer to gap between the channel and the substrate. Also ensure you have added the external cladding to the outer edge of the channel at this stage.

3.

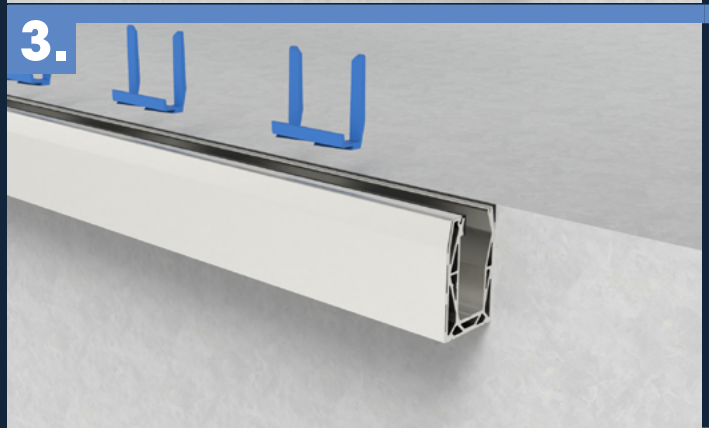

Place the isolator and slider into the channel with the wings on the inside edge and the slider positioned to the right of the isolator.

4.

Lower the glass into the channel and then push in the clamp. Make sure each clamp is between the wings of a slider.

5.

Insert one wedge tool at each end of the pannel and manoeuve the glass into the desired position by hand. Start with the glass leaning towards you.

6.

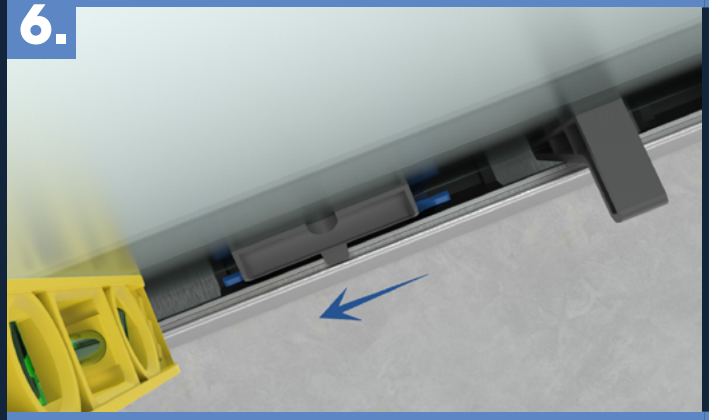

Slide the clamps to the left so the slider is tight. Press the clip on the clamp and push down into the channel. Leave the wedge tools in until the bolts have been tightened.

7.

Tighten them against the channel by unwinding the bolt.

8.

Add the top bead, gasket and endcaps to finish the installation.

For deglazing: loosen and remove clamp bars, move the glass to free it. Then use the hook on the spanner to lift out the clamps before removing the glass.