POSI Base Fix
With Timber Fixing Plate
INSTALLATION GUIDE

Parts Included

Timber plate x 15
M12 bolts x 15
M12 Washer x 15

Tools Required

Drill
16mm Diameter Wood Drill Bit
3mm Diameter Wood Drill Bit
Hammer
19mm Hex Socket
Wrench
Tape Measure
Pencil

Safety

Please wear eye protection
and ear protection

Should any problems arise or you have any questions please don't hesitate to contact us:
T: +44 (0)1208 261 040
E:- sales@pure-vista.com
www.pure-vista.com

POSI Base Fix
With Timber Fixing Plate
INSTALLATION GUIDE

1.

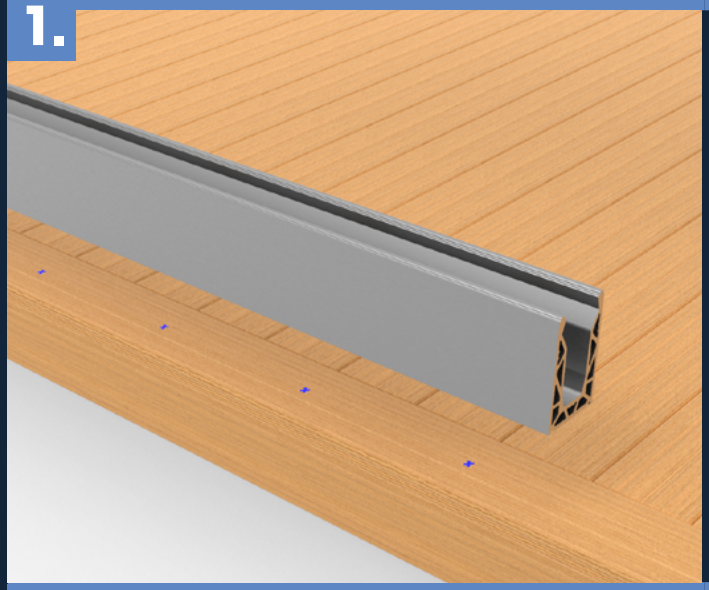

DRILL THE HOLES

The POSI base channel should be placed onto its designated position and the channel fixing holes marked onto the substrate for drilling. Remove the channel before drilling the holes out. Starting with a pilot hole and finally drilling out to 16mm wide and 50-60mm deep, the Timber FIxing Plate will be placed in the hole. Ensure all debris is removed before positioning the Timber Fixing Plate.

2.

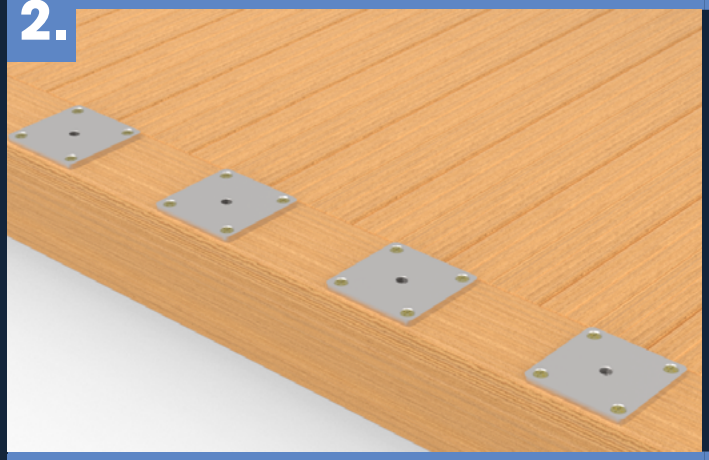

PLACE THE TIMBER PLATE

Insert the Timber Fixing Plate into the drilled holes and line up so it is flush with the wood. Drill pilot holes for the wood screws using the timber plate as a guide. Attach the Timber Fixing Plate using 4 screws per plate. These screws must be 6mm wide and a minimum of 100mm long.

3.

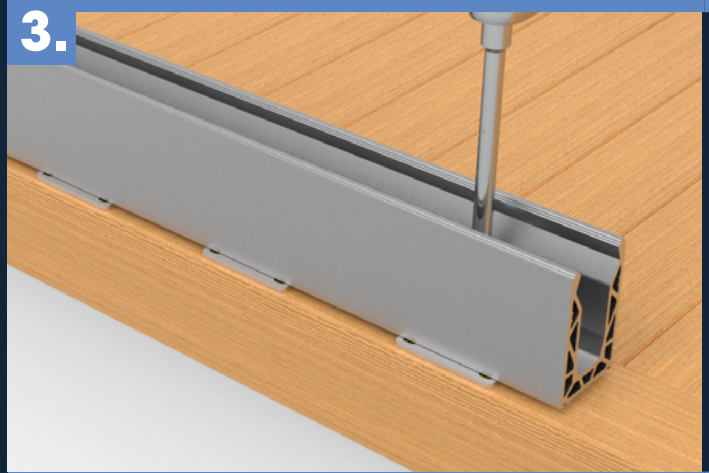

FIT THE CHANNEL

Place the POSI base channel back into position, on top of the Timber Fixing Plates. Ensure all the bolt holes line up correctly before proceeding to fix the channel with M12 bolts. Continue with the POSI and glass installation as normal.

Should any problems arise or you have any questions please don't hesitate to contact us:
T: +44 (0)1208 261 040
E:- sales@pure-vista.com
www.pure-vista.com